



CONTENTS

1. SAFETY INFORMATION.....	3
2. SAFETY INSTRUCTIONS.....	5
3. PRODUCT DESCRIPTION.....	7
4. ACCESSORIES.....	8
5. CONTROL PANEL.....	9
6. PROGRAMME TABLE.....	10
7. OPTIONS.....	13
8. BEFORE FIRST USE.....	14
9. DAILY USE.....	14
10. HINTS AND TIPS.....	16
11. CARE AND CLEANING.....	17
12. TROUBLESHOOTING.....	19
13. TECHNICAL DATA.....	21
14. INSTALLATION.....	22

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.aeg.com



Register your product for better service:
www.registeraeg.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.aeg.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

1.1 General Safety

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions, supplied with the accessory. Read it carefully before installation (Refer to the Installation leaflet).
- The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, where the appliance door can not be fully opened.
- The ventilation openings in the base (if applicable) must not be obstructed by a carpet.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels. (if applicable)

- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Obey the maximum load volume of 8kg (refer to the "Programme chart" chapter).
- Do not use the appliance if industrial chemicals have been used for cleaning.
- Wipe away lint that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

1.2 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, we recommend you activate it.
- Cleaning and user maintenance shall not be made by children without supervision.

2. SAFETY INSTRUCTIONS

2.1 Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Do not install or use the appliance where the temperature is less than 5°C or higher than 35°C.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always move the appliance vertically.
- The rear surface of the appliance must be put against the wall.

- When the appliance is put in its permanent position, check if it is fully level with the aid of a spirit level. If it is not, adjust the feet until it is.

2.2 Electrical connection



WARNING!

Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.

- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- Only for UK and Ireland. The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse.
- This appliance complies with the E.E.C. Directives.

2.3 Use



WARNING!

Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Use this appliance in a household only.
- Do not dry the damaged items which contain padding or fillings.
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door.
- Do not dry dripping wet clothes in the tumble dryer.

2.4 Internal light



WARNING!

Risk of injury.

- Visible LED radiation, do not look directly into the beam.
- The type of light bulb or halogen lamp used for this appliance is only for household appliances. Do not use it for house lighting.
- To replace the internal light, contact the Authorised Service Centre.

2.5 Care and cleaning



WARNING!

Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

2.6 Disposal




WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

3. PRODUCT DESCRIPTION

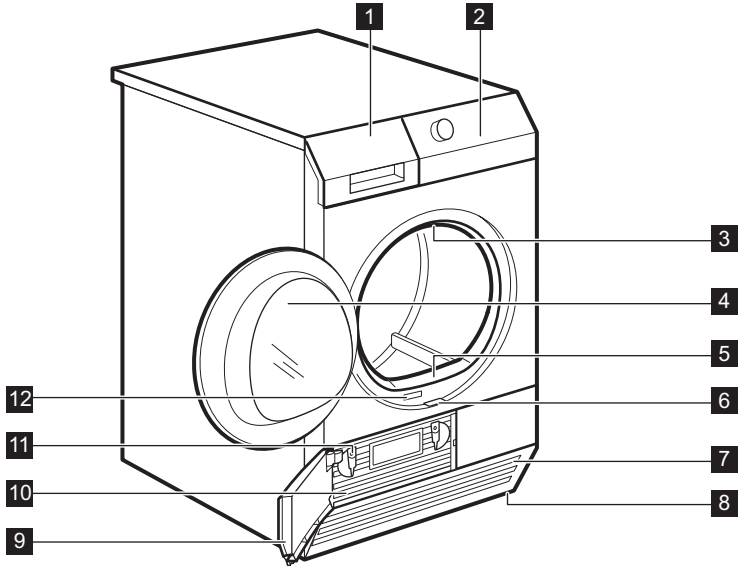

1 Water container

2 Control panel

3 Internal light

4 Appliance door

5 Filter

6 Button for condenser door

7 Airflow slots

8 Adjustable feet

9 Condenser door

10 Condenser cover

11 Locks for condenser cover


12 Rating plate



The load door can be installed by the user in the opposite side. It can help to easily put and remove the laundry or if there is a limit to install the appliance (see separate leaflet).

4. ACCESSORIES

4.1 Stacking kit

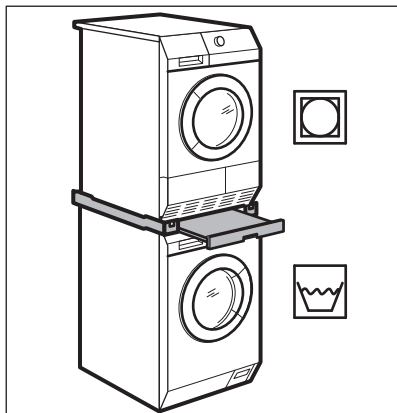


Accessory name: SKP11, STA8, STA9
Available from your authorized vendor.

Stacking kit can be used only with the washing machines specified in the leaflet. See the leaflet attached.

Read carefully the instructions supplied with the accessory.

4.2 Draining kit

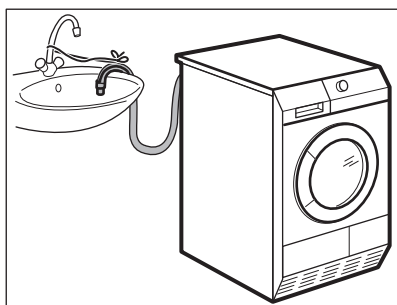

Accessory name: DK11.


It is available from your authorized vendor (can be attached to some types of the tumble dryers)

The accessory for through draining of the condensed water into a basin, siphon, gully, etc. After the installation, the water container is drained automatically. The water container must stay in the appliance.

The installed hose must be on the height from minimum of 50 cm to maximum of 1 m from floor level. The hose cannot be in loop. Decrease the length of the hose if necessary.

Read carefully the instructions supplied with the accessory.

4.3 Pedestal with the drawer

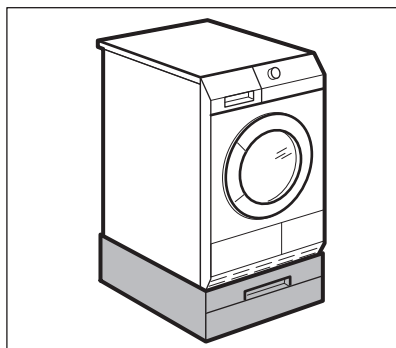

Accessory name: PDSTP10.


It is available from your authorized vendor.

To put the appliance higher at the level what helps to easy load and remove the laundry.

The drawer can be used for laundry storage e.g. : towels, cleaning products and more.

Read carefully the instructions supplied with the accessory.

4.4 Drying rack

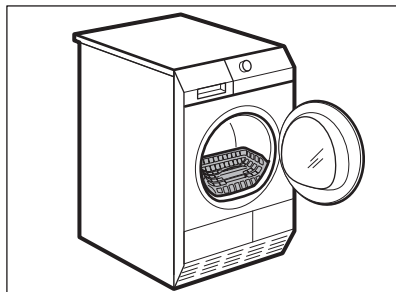

Accessory name: RA5, RA6, RA11, RA12.


It is available from your authorized vendor (can be attached to some types of the tumble dryers). Do the check with the vendor or on the web site if the accessory is compatible with your appliance.

Drying rack accessory let to dry safely in the tumble dryer:

- sport shoes
- wool
- soft toys
- lingerie


Read carefully the instructions supplied with the accessory.

5. CONTROL PANEL

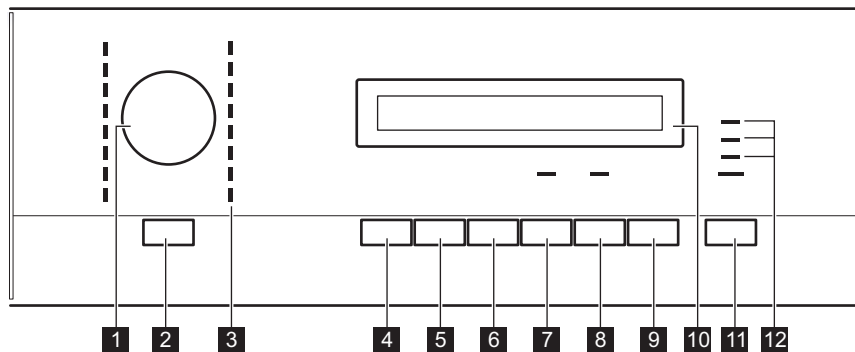

- 1 Programme dial
- 2 On/Off button
- 3 Programme indicators
- 4 Dry Plus button
- 5 Delicate button
- 6 Anti-crease button
- 7 Buzzer button
- 8 Time Drying button
- 9 Delay Start button
- 10 Display
- 11 Start/Pause button
- 12 Indicators:
Tank - drain the water container
Filter - clean filter
Condenser - clean condenser

 5.1 Display





MIN	default laundry dryness
MED	moderate laundry dryness
MAX	maximum laundry dryness
	delicate option on
30m / 90m	anti-crease phase duration
	drying phase indicator
	cooling phase indicator
	crease guard phase indicator
	child lock option on
	delay start option on

2 . 00	cycle time indication
10' - 2 . 0 0	time programme selection (10min.-2h)

30' - 20h	delay start selection (30min.-20h)
-----------	------------------------------------


6. PROGRAMME TABLE

Programmes	Load 1)	Properties / Fabric mark
Cottons		
Extra Dry	8 kg	Drying level: extra dry. /
Cupboard Dry  2)3)	8 kg	Drying level: cupboard dry. /
Iron Dry 2)	8 kg	Drying level: applicable for iron. /
Jeans	8 kg	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams). /
Bed Linen	3 kg	To dry bed linen such as: single and double sheet, pillowcase, bed-spread. /
Duvets	3 kg	To dry one or two duvet and pillows (with feather, down or synthetic fillings). /
Time Drying	8 kg	With this programme you can use the option Time Drying and set the programme duration. /
Extra Quick Mixed	3 kg	To dry cotton and synthetic fabrics, uses low temperature. /
Synthetics		
Extra Dry	3,5 kg	Drying level: extra dry. /
Cupboard Dry 2)	3,5 kg	Drying level: cupboard dry. /
Iron Dry	3,5 kg	Drying level: applicable for iron. /

Programmes	Load 1)	Properties / Fabric mark
Easy Iron	1 kg (or 5 shirts)	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, Immediately remove the items and put them on a hanger. / ☺☺☺
Active Wear	2 kg	To dry outdoor pieces of clothing, technical, sports, pile fabrics, waterproof and breathable jackets, shell jacket teamed with a removable fleece or inner insulation.
Sports	2 kg	Sportswear, thin and light fabrics, microfiber, polyester, which are not ironed.
Delicates	3 kg	Delicate fabrics. / ☺☺☺
Wool 4)	1 kg	To dry the cloths made of wool . The cloths become soft and cosy. We recommend to remove the cloths immediately after the programme end. To increase or to decrease the level of the remaining moisture of the laundry you can use the function Dry Plus.  WOOLMARK APPAREL CARE

1) The maximum weight refers to dry items.


2) **For test institutes only:** Standard programmes for tests are specified in the EN 61121 document. If is necessary to correct the remaining moisture level of the laundry, adjust the programme with the Dry Plus option Clean the filter after each cycle

3) The  Cottons Cupboard Dry programme is the “Standard cotton programme” and it is suitable to dry normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

4) The wool drying cycle of this machine has been approved by The **Woolmark** Company for the drying of machine washable wool products provided that the products are washed and dried according to the instructions on the garment label and those issued by the manufacturer of this machine. **M1221**. In UK, Eire, Hong Kong and India the **Woolmark** symbol is a certification trademark.

6.1 Programmes and options selection

Programmes 1)	Options			
	Dry Plus	Delicate	Anti-crease	Time Drying
Cottons; Extra Dry	■	■	■	

Programmes ¹⁾	Options			Time Drying
	Dry Plus	Delicate	Anti-crease	
Cottons; Cupboard Dry 	■	■	■	
Cottons; Iron Dry	■	■	■	
Jeans	■	■	■	
Bed Linen	■	■	■	
Duvets	■	■ 2)		
Time Drying		■	■	■
Extra Quick Mixed	■		■	
Synthetics; Extra Dry	■	■	■	
Synthetics; Cupboard Dry	■	■	■	
Synthetics; Iron Dry	■	■	■	
Easy Iron	■	■ 2)	■	
Active Wear	■	■ 2)		
Sports	■	■	■	
Delicates	■	■ 2)	■	
Wool	■			■ 3)

1) Together with the programme you can set 1 or more options.

2) Activated by default.

3) Only with the drying rack — see chapter ACCESSORIES.

6.2 Consumption Data

Programme	Spun at / residual humidity	Drying time	Energy consumption
Cottons 8 kg			
Cupboard Dry	1400 rpm / 50%	123 min.	4,23 kWh
	1000 rpm / 60%	138 min.	4,82 kWh
Iron Dry	1400 rpm / 50%	107 min.	3,46 kWh

Programme	Spun at / residual humidity	Drying time	Energy consumption
	1000 rpm / 60%	118 min.	3,95 kWh
Synthetics 3,5 kg			
Cupboard Dry	1200 rpm / 40%	50 min.	1,47 kWh
	800 rpm / 50%	57 min.	1,68 kWh

7. OPTIONS

7.1 Dry Plus


This option helps to get the laundry more dried. There are 3 possible selections:

MIN - the default selection which is related to the programme.

MED - the selection to get the laundry lightly dried.

MAX - the selection to get the laundry more dried.

7.2 Delicate

To dry more lightly the sensitive and temperature sensitive textiles (e.g. acrylic, viscose). With this option programme operates with decreased heat. For fabrics with the symbol  on the fabric label.

7.3 Anti-crease

Extends anti-crease phase (30 minutes) at the end of the drying cycle to 90 minutes. This option prevents laundry from creases. Laundry can be removed during the anti-crease phase.

7.4 Buzzer

When the buzzer option is activated you can hear the buzzer at the:

- cycle end

- anti-crease phase start and end
- cycle interruption

The buzzer option is by default always on. You can use this function to activate or deactivate the sound.



You can activate the Buzzer option with all programmes.

7.5 Time Drying

Operates only with the Time Drying programme. Lets the user to set special time of drying programme from minimum 10 min. to maximum of 2 hours (in 10 min. steps).

7.6 Delay Start



Lets to delay the start of a drying programme from minimum of 30 minutes to maximum of 20 hours.

1. Set the drying programme and options.
2. Push the Delay Start button again and again.
the necessary time of the delay come into the view on the display (e.g. **12h** if the programme has to start after 12 hours.)
3. To activate the Delay Start option, push the Start/Pause button. The time to start decreases on the display.

8. BEFORE FIRST USE





Before you use the appliance for the first time do these operations:

- Clean the tumble dryer drum with a moist cloth.
- Start a short programme (e.g. 30 minutes) with moist laundry.

9. DAILY USE

9.1 Preparing the laundry

- Close the zippers.
- Close the fasteners of the duvet covers.
- Do not keep ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from the pockets.
- If an item has the internal layer made of cotton, turn it inside out. Make sure that the cotton layer is always external
- We recommend that you set the correct programme applicable for the type of fabrics that are in the appliance.
- Do not put fabrics with strong colours together with fabrics with light colours. Strong colours can bleed.
- Use an applicable programme for cotton jersey and knitwear to prevent the items to shrink.
- Make sure that the laundry weight is not more than the maximum weight that is in the programme table.
- Dry only the laundry that is applicable for tumble dryer. Refer to the fabric label on the items.

Fabric label	Description
	Laundry that is applicable for tumble dryer.
	Laundry that is applicable for tumble dryer. Set the programme with standard temperature.
	Laundry that is applicable for tumble dryer. Set the programme with low temperature.
	Laundry that is not applicable for tumble dryer.

9.2 Loading the laundry



CAUTION!

Do not lock the laundry in between the appliance door and rubber seal.

1. Pull the appliance door.
2. Load loosely the laundry.
3. Close the appliance door.

9.3 Turning on the appliance

To turn on the appliance:

Push the On/Off button.

If the appliance is on, some indications come in to the view on the display.

9.4 Auto stand-by function


To decrease the energy consumption, the automatic stand-by function deactivates the appliance:

- if the Start/Pause button was not pushed in the time of 5 minutes.
- after 5 minutes from the programme end.

Push the On/Off button to activate the appliance.

If the appliance is on, some indications come in to the view on the display.

9.5 Setting a programme

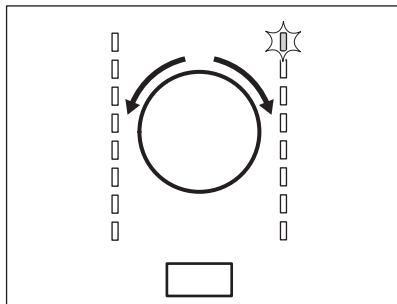


Use the programme dial to set the programme. The possible time to complete the programme comes into the view on the display.

i The drying time you see is related to the load of 5 kg for cotton and jeans programmes. For the other programmes the drying time is related to the recommended loads. The drying time of the cotton and jeans programmes with the load more than 5 kg is longer.

9.6 Options

Together with the programme you can set 1 or more special options.

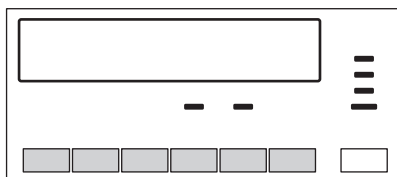

To activate or deactivate the option push the applicable button. When the option is activated the LED above the button or symbol on the display comes into the view.

9.7 Child lock option

The child lock can be set to prevent the children to play with the appliance. The


child lock option locks all push buttons and the programme dial (this option does not lock **On/Off** button).

You can activate the child lock option:

- before you push the **Start/Pause** button - the appliance cannot start
- after you push the **Start/Pause** button - programmes and option selection is off.

Child lock option activation:


1. Turn on the dryer.
2. Wait approximately 8 seconds.
3. Select 1 of the available programmes.
4. Push at the same time and hold down the **Dry Plus** and **Delicate** buttons.

The symbol  comes into the view on the display.

5. To deactivate the child lock, push again the above buttons until the symbol goes out of the view.

9.8 Starting a programme

To start the programme:

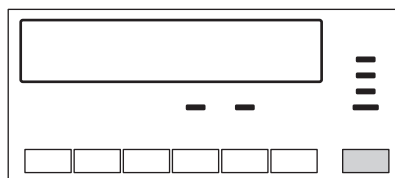

Push the **Start/Pause** button.

The appliance starts and the LED above the button does not flash but is stable.

9.9 Programme change


To change a programme:

1. Push the On/Off button to turn off the appliance.
2. Push again the On/Off button to turn on the appliance.
3. Set a new programme.

9.10 Programme end



Clean the filter and drain the water container after each drying cycle. (See chapter CARE AND CLEANING.)

If the drying cycle is completed, the symbol  flashes on the display. If the Buzzer option is on, the acoustic signal sounds intermittently for 1 minute.



If you do not turn off the appliance, the crease guard phase starts. Laundry can be removed during this phase.

To remove the laundry:

1. Push the On/Off button for 2 seconds to turn off the appliance.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

10. HINTS AND TIPS

10.1 Ecological hints


- Spin good the laundry before drying.
- Use the load volumes which are specified in the programme chart.
- Clean the filter after each drying cycle.
- Do not use fabric softener to wash and then dry. In the tumble dryer laundry becomes soft automatically.
- Use the condensate as distilled water, e.g. for steam ironing. If it is necessary clean the condensate before (e.g. with a coffee filter) to remove possible small pieces of fluff.
- Always keep the airflow slots on the bottom of the appliance clear.
- Make sure that is good airflow in the appliance installation position.


10.2 Adjustment of the remaining laundry moisture degree

To change the default degree of the remaining moisture of the laundry:

1. Turn on the appliance.
2. Wait approximately 8 seconds.
3. Select 1 of available programmes.
4. Push at the same time and hold down the **Dry Plus** and **Anti-crease** buttons.

One of the symbols goes into the view on the display:

 - the maximum dry laundry

 - the more dry laundry

 
 
 - the standard dry laundry

5. Push the **Start/Pause** button again and again until you set necessary degree.
6. To memorise the setting, push at the same time the **Dry Plus** and **Anti-crease** buttons for approximately 2 seconds.

10.3 Deactivating the Tank indicator

1. Turn on the appliance.
2. Wait approximately 8 seconds.
3. Select 1 of available programmes.
4. Push at the same time and hold down the **Dry Plus** and **Buzzer** buttons.

One of 2 configurations is possible:

- the Tank indicator: is on and the symbol  goes into the view - the water container indicator is permanently **on**
- the Tank indicator: is off and the symbol  goes into the view - the water container indicator is permanently **off**

11. CARE AND CLEANING


11.1 Cleaning the filter

At the end of each cycle the indicator **Filter** is on and you must clean the filter.


- i** The filter collects the fluff. The fluff occurs while the clothes are dried in the tumble dryer.

To clean the filter:


1. Open the door. Pull the filter.

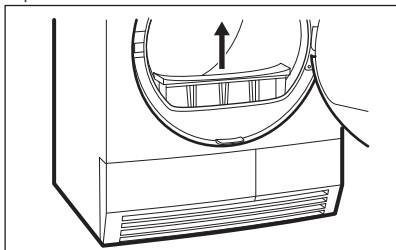


2. Open the filter.

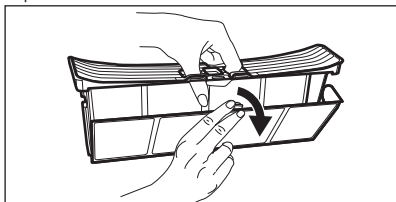


3. Use a moist hand to clean the filter.

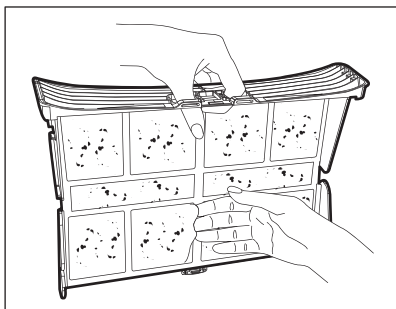

4. If necessary clean the filter with the brush under warm tap water and/or a vacuum cleaner. Close the filter.

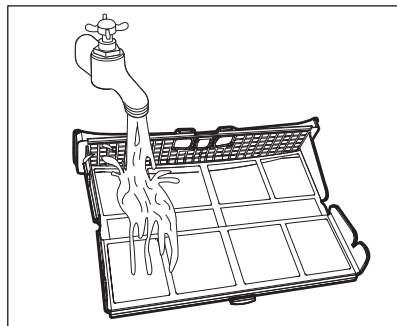

5. If necessary remove fluff from the filter socket and gasket. You can use a vacuum cleaner. Put the filter inside the filter socket.

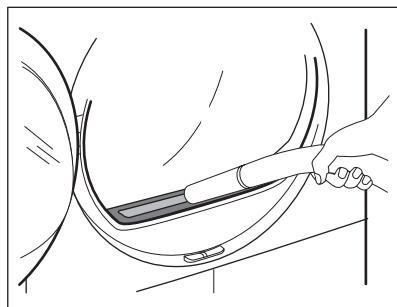


11.2 Draining the water container

Drain the condensed water container after each drying cycle.


If the condensed water container is full, the programme breaks off automatically. The indicator **Tank** is on and you must drain the water container.

To drain the water container:

1. Pull the water container and keep it in horizontal position.

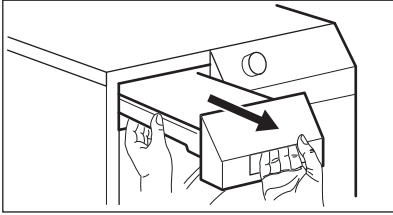

2. Move the plastic connection out and drain the water into a basin or equivalent receptacle.

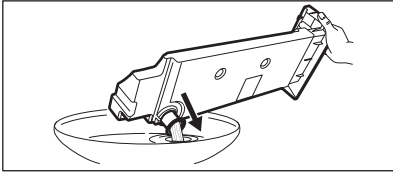


3. Move plastic connection in and install water container.
4. To continue the programme press the Start/Pause button.

11.3 Cleaning the condenser


If the indicator **Condenser** flashes, the condenser and its compartment must be cleaned.

To clean the condenser and its compartment:


1. Open the door.
2. Move the release button on the bottom of the door to open the condenser door.

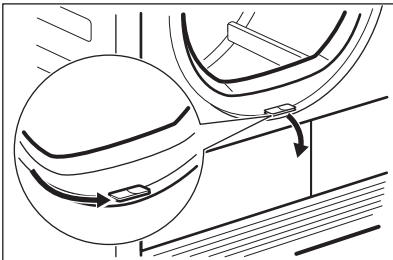


3. Turn 2 blockages to unlock the condenser cover.

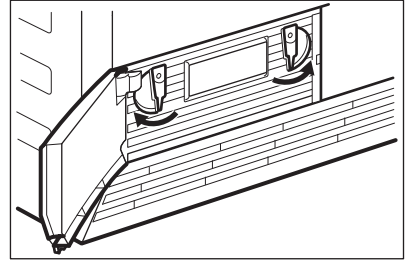


4. Lower the condenser cover.

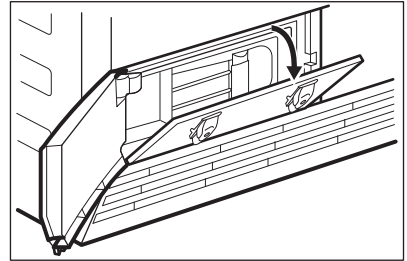

5. Catch the handle and pull the condenser out from the bottom compartment. Move condenser horizontally to do not spill remaining water.

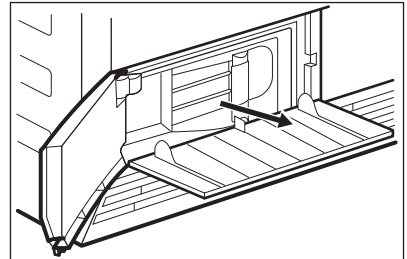

6. Clean the condenser in vertical position over a basin or padding. Rinse through with a hand shower.

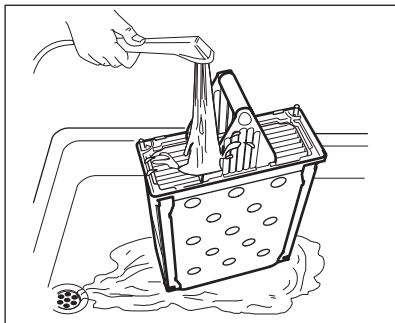

7. Put the condenser back inside the bottom compartment.
8. Close the condenser cover.
9. Lock 2 blockages until they snap.
10. Close the condenser door.

11.4 Cleaning the drum



WARNING!

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and

drum ribs. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use abrasive materials or steel wool to clean the drum.

11.5 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance.

11.6 Cleaning the airflow slots

Use a vacuum cleaner to remove the fluff from the airflow slots.

12. TROUBLESHOOTING

Problem 1)	Possible cause	Remedy
The tumble dryer does not operate.	The tumble dryer is not connected to mains supply.	Connect in at mains socket. Check fuse in fuse box (domestic installation).
	The loading door is opened.	Close the loading door.
	The On/Off button was not pushed.	Push the On/Off button.
	The Start/Pause button was not pushed.	Push the Start/Pause button.
	The appliance is in the standby mode.	Push the On/Off button.

Problem 1)	Possible cause	Remedy
Unsatisfactory drying result.	Incorrect programme selection.	Do the selection of the applicable programme. 2)
	The filter is clogged.	Clean the filter. 3)
	The Dry Plus option was in minimum level. 4)	Change the Dry Plus option to the moderate or maximum level. 4)
	Too high volume of the load.	Obey the maximum load volume.
	The airflow grill is clogged.	Clean the airflow grill in the bottom of the appliance.
	Dirt on the humidity sensor in the drum.	Clean the front surface of the drum.
	Incorrect remaining laundry moisture degree.	Adjust remaining laundry moisture degree. 5)
	The condenser is clogged.	Clean the condenser. 3)
The loading door does not closed	The filter not locked in the position.	Put the filter in the correct position.
	The laundry is locked between the door and the seal.	Put the load correctly in the drum.
Err (Error) on the display.	You try to change the programme or the option after the start of the cycle.	Turn the tumble dryer off and on. Make the new selection.
	The option you try to activate is not applicable with the selected programme.	Turn the tumble dryer off and on. Make the new selection.
No drum light	Defective drum lamp.	Contact the service centre to replace the drum lamp.
Abnormally elapsing time on the display.	The time to end is calculated on the basis of the volume and dampness of the laundry.	The automatic procedure — this is not the appliance malfunction.
Programme inactive.	The water container is full.	Drain the water container, push the Start/Pause button. 3)

Problem 1)	Possible cause	Remedy
Drying cycle too short.	Too small laundry volume.	Do the selection of time programme. The time value must be related to the load. To dry 1 item or small quantities of the laundry we recommend to use short times.
	The laundry is too dry.	Do the selection of time programme or higher drying level (e.g. Extra Dry)
Drying cycle too long 6)	The filter is clogged.	Clean the filter.
	Too high volume of the load.	Obey the maximum load volume.
	The laundry not spun sufficiently.	Spin correctly the laundry.
	Very high room temperature - this is not the appliance malfunction.	If possible, lower the room temperature.

1) If there is an error message on the display (e.g. **E51**): Turn the tumble dryer off and on. Make a selection of the new programme. Push the Start/Pause button. Does not operate? - contact the service centre and give the error code.

2) Follow the programme description — see PROGRAMME TABLE

3) See chapter CARE AND CLEANING

4) Only dryers with the Dry Plus option

5) See HINTS AND TIPS chapter

6) Note: After maximum 5 hours the drying cycle ends automatically.

13. TECHNICAL DATA

Height x Width x Depth	850 x 600 x 580 mm (maximal 640 mm)
Max. depth with the appliance door open	1090 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	118 l
Maximum load volume	8 kg
Voltage	230-240 V
Frequency	50 Hz
Necessary fuse	13 A
Total power	2800 W
Energy efficiency class	B
Energy consumption ¹⁾	4,82 kWh

Annual energy consumption ²⁾	560 kWh
Left—on mode power absorption	0,55 W
Off mode power absorption	0,55 W
Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	IPX4

1) With reference to EN 61121. 8kg of cotton centrifuged at 1000 rpm.

2) Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (REGULATION (EU) No 392/2012).

14. INSTALLATION

14.1 Unpacking



CAUTION!

Before use all parts of the transport packaging must be removed.


To remove the polystyrene blockages:

1. Open the door.
2. Pull plastic hose with the polystyrene blockages out from the drum.




14.2 Feet regulation

It is possible to adjust the height of the tumble dryer. To do that adjust the feet.

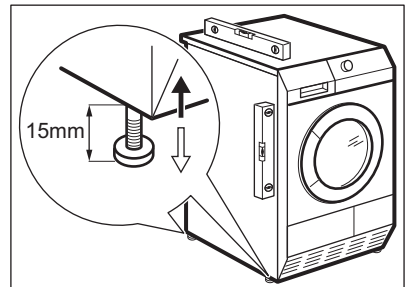



14.3 Installation under a counter

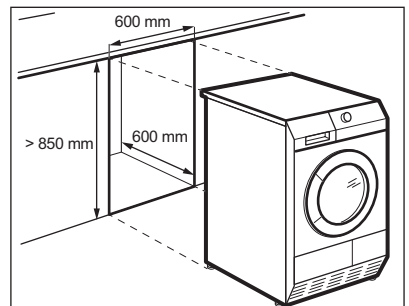The appliance can be installed as freestanding or below the kitchen counter with correct space (see picture).



15. ENVIRONMENTAL CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.aeg.com/shop



136921152-A-162014

