


AEG-Electrolux viva spin 7418,7480

**Bodenstaubsauger
Vacuum Cleaner
Aspirateur traîneau
Vloerstofzuiger**

**Gebrauchsanweisung
Operating Instructions
Mode d'emploi
Gebruiksaanwijzing**

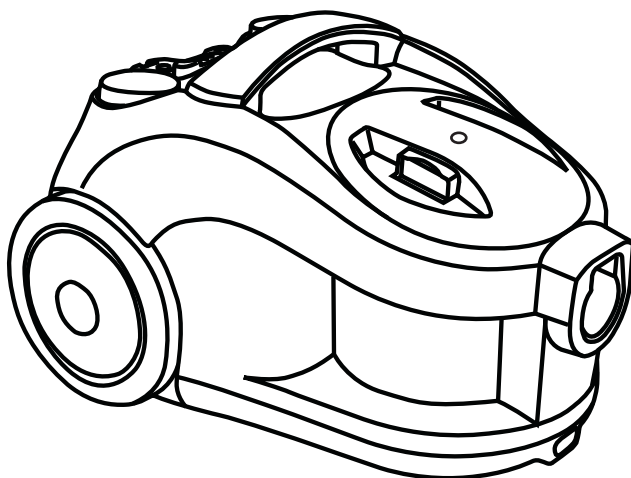




PERFEKT IN FORM UND FUNKTION






AEG

 **Electrolux**

Sehr geehrte Kundin, sehr geehrter Kunde, ...	6	Chère Cliente, Cher Client,	12
Ausstattung	6	Accessoires	12
Zubehör	6	Votre viva spin possède les	
Sicherheitshinweise	6	caractéristiques suivantes	12
Inbetriebnahme	7	Accessoires	12
Die besten Ergebnisse erzielen	7	Assurer votre sécurité	12
Ausleeren des Staubbehälters	7	Mise en marche	13
Auswechseln / Reinigen der Filter	7	Comment obtenir les meilleurs résultats	13
Reinigen des Cartridge Rundfilters	8	Comment vider le conteneur à poussière	13
Wechseln des Abluftfilters	8	Nettoyage des filtres	14
Fehlersuche und -behebung	8	Le remplacement de la cartouche filtrante	14
		Le remplacement du filtre de sortie d'air	14
		Gestion des pannes	14
Dear Customer	9		
Features	9	Geachte klant,	15
Accessories	9	Kenmerken van uw viva spin	15
Safety instructions	9	Toebehoren	15
Getting Started	9	Veiligheid voorop	15
Getting the best results	10	Voordat u begint	15
Removing the contents of the dust		Optimale resultaten	16
container	10	Ledig de inhoud van de stofcontainer	16
Cleaning the filters	10	Het schoonmaken van en	
Cleaning the cartridge filter	10	het vervangen van de filters	17
Cleaning the exhaust filter	11	Vervanging van de filtercassette	17
Troubleshooting	11	Vervanging van de uitlaatfilter	17
		Problemen oplossen	17

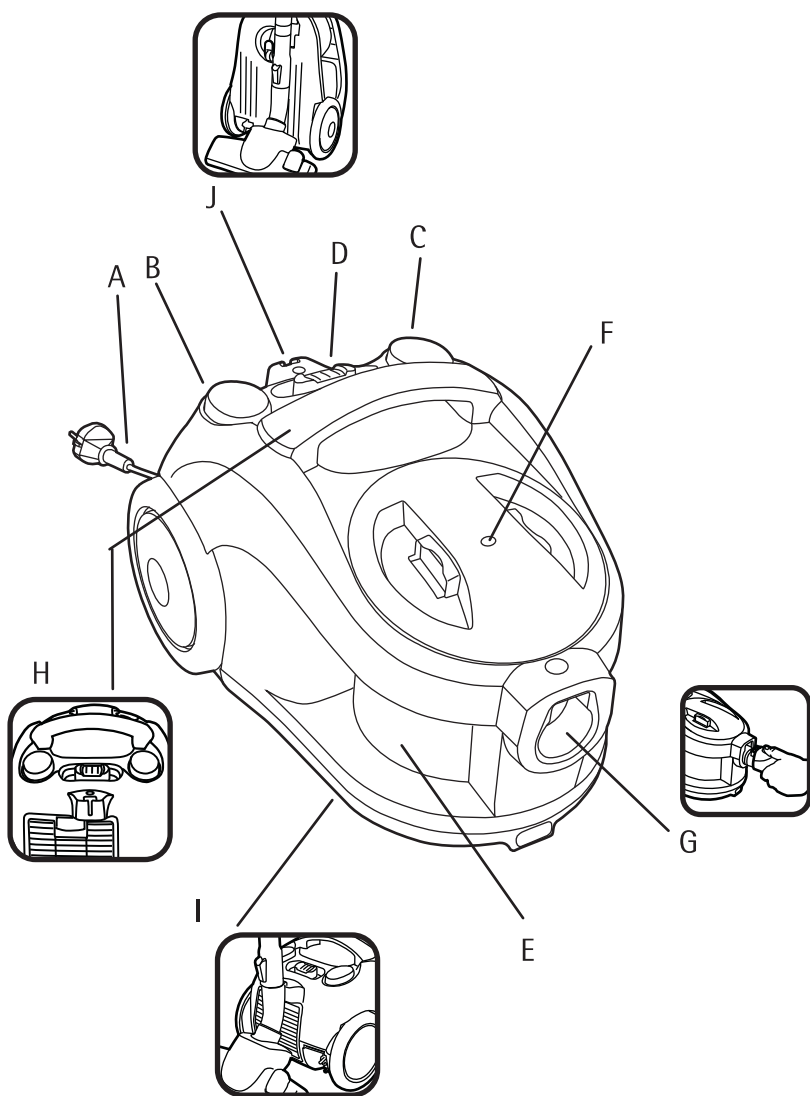

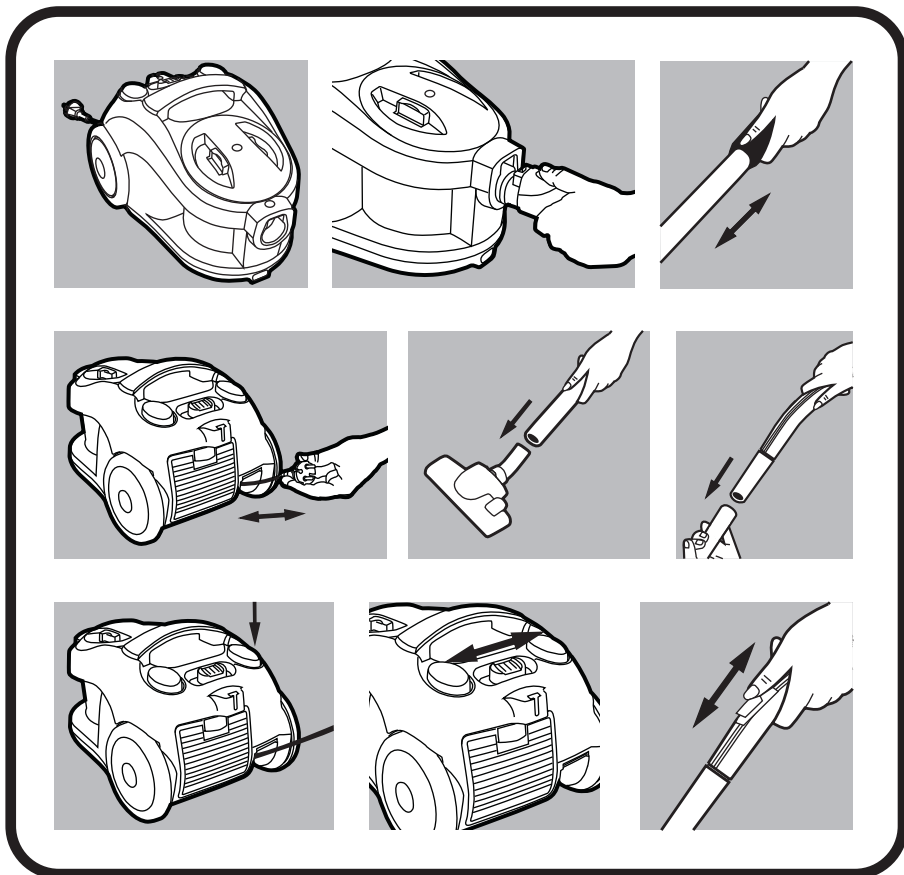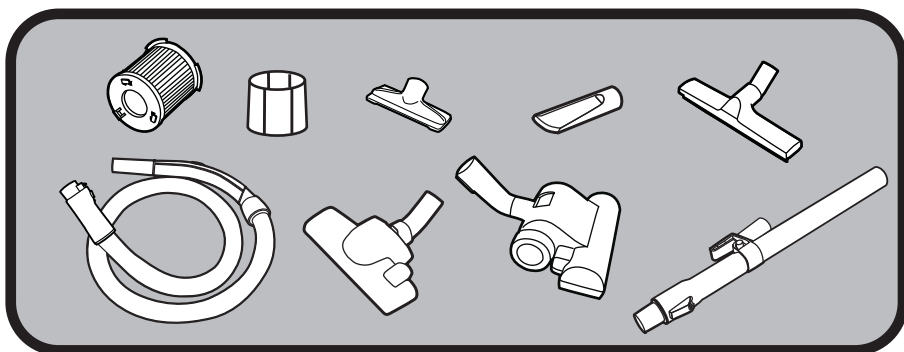

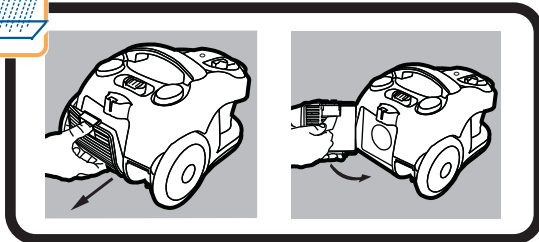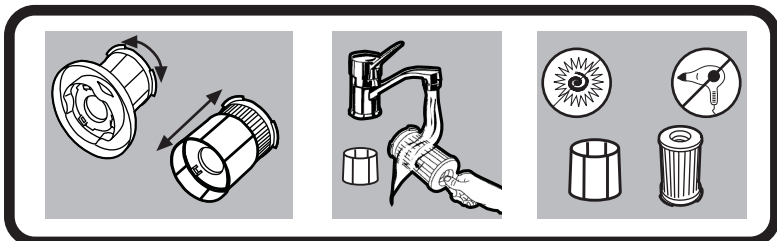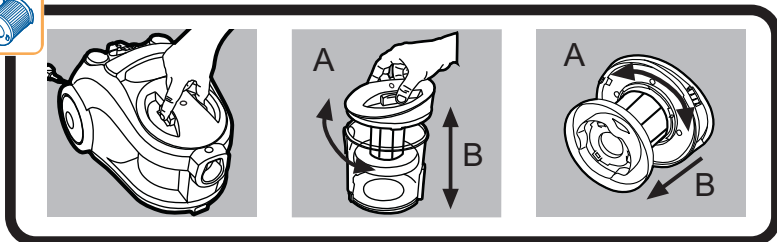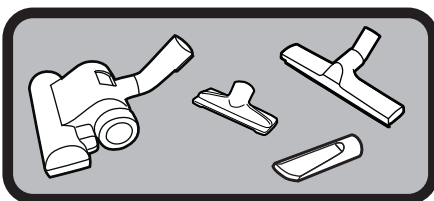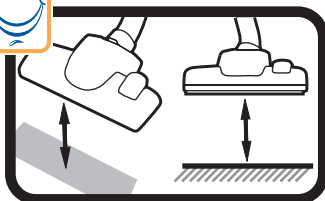

Dear Customer

Thank you for choosing an AEG-Electrolux cleaner. To ensure total satisfaction, read this Instruction book carefully.

Features (see page 3)

- A Mains cable
- B Cable rewind button
- C On/off button
- D Suction control
- E Dust container
- F Dust container indicator
- G Hose connection
- H Carrying handle
- I Horizontal parking position
- J Vertical parking position



Accessories (see page 4)

- Cartridge filter
- Protector mesh
- Telescopic tube
- Swivel hose and handle with manual suction control
- Combination carpet/hard floor nozzle
- Hard floor nozzle (7480)
- Turbo nozzle (7480)
- Narrow crevice nozzle
- Combination upholstery nozzle/brush
- Accessory holder ('caddy')



Safety instructions

The cleaner is for domestic use only and has been designed to ensure maximum safety and performance. Please follow these simple precautions:

- The cleaner is double-insulated so it must not be earthed.

- The cleaner is only to be used by adults. Young children or infirm persons should be supervised to ensure that they do not play with the appliance.
- Always store in a dry place.
- Do not use to pick up liquids.
- Avoid sharp objects.
- Do not vacuum up very fine dust from plaster, cement, cold cinders, flour or ash.

These materials can cause serious damage to the motor - a damage which is not covered by the warranty.

- Do not use near flammable gases.
- Avoid tugging on the mains cable and check cable regularly for damage.
- **Note: Do not use your cleaner with a damaged cable. If the cable is damaged, it should be replaced at an AEG-Electrolux Service Centre.**
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- All service and repairs must be carried out by authorised **AEG-Electrolux** service staff.



Getting Started (see page 4)



Check the dust container is in place.



To connect the hose into the suction inlet push it until it clicks.

To disconnect the hose from the suction inlet push the button at the end of the hose.



Attach the telescopic tube to the hose handle and floor nozzle by pushing and twisting together. (Twist and pull apart to dismantle).



Extend the cable and connect to mains. The cleaner is fitted with cable rewind, ensure cable is not

twisted before use. (Press foot pedal to rewind. **Note: Please hold the plug to prevent it striking you or the machine).**

 Press the On/Off button to activate the cleaner.

 By moving the variable power control, the suction power can be adjusted.

Suction can also be regulated on the hose handle by opening/closing the aperture.



Getting the best results (see page 4)

- **Carpets:** Use the floor nozzle with the lever in horizontal position.
- **Hard floors:** Use the floor nozzle with the lever in vertical position.
- **Loose rugs/curtains/lightweight fabrics:** Reduce the suction power. Use the floor nozzle for loose rugs and the upholstery nozzle for curtains, cushions etc.
- **Confined areas:** Use the crevice nozzle for crevices, corners and radiators.
- **Hard floor / parquetry:** use the hard floor nozzle to avoid scratching.
- **For the perfect care of your carpets:** use the turbo nozzle. The rotary motion of its brush gently loosens short-pile carpets where the dirt has been trodden in. It removes stubborn fluff and pet hairs.



Removing the contents of the dust container (see page 5)

Never operate the cleaner without the dust container installed.
The dust container must be emptied if the window of the dust container

indicator changes its colour into red when the cleaner is operating at maximum power and the nozzle is raised from the floor.



Remove the dust container from the cleaner by pushing the opening button on both sides.



Remove the contents of the dust container by pushing the orange-coloured opening button.



Close the dust container lid until it clicks.



Put the dust container back into the cleaner.



Cleaning the filters (see page 5)

Filters should be replaced at least twice a year or when they become visibly soiled.

Always operate the cleaner with filters installed to avoid reduced suction and the damage of the motor.

Always operate the cleaner with the cartridge filter installed.

Disconnect from electrical outlet before changing the filters.



Cleaning the cartridge filter:



Remove the dust container from the cleaner by pushing the opening button on both sides.



Rotate the dust container cover counter-clockwise (A) and pull it out from the dust container (B).



Remove the cartridge filter by turning it counter-clockwise (A) and pull it out from the dust container cover (B).



Remove the cartridge filter from the cartridge filter plate by turning it counter-clockwise.

-  Remove the protector mesh by pulling it out.
-  Shake the dirt from the filter and the mesh into a bin. If necessary, the filter and mesh can be rinsed, with cold water, under a tap .
-  Air dry them for approximately 24 hours, to ensure it is completely dry before re-using. Avoid direct sunlight and extreme drying circumstances (hair-dryer, etc.). **If you wish to use your appliance while the cartridge filter is drying, you may use the extra cartridge filter inserted in the packaging box (7480).**
-  Insert the protector mesh back into its place by pulling it onto the cartridge filter.
-  Insert the cartridge filter back into the cartridge filter plate by turning it clockwise.
-  Insert the cartridge filter back into the dust container cover (B) and turn it clockwise (A).
-  Insert the dust container cover back into the dust container (B) and turn it clockwise (A).
-  Put the dust container back into the cleaner.

Cartridge filter reference number:
407 135 654/9.

Cleaning the exhaust filter:

-  Open the filter grill to remove the exhaust filter.
-  Take the filter out of the grill and insert a new one.
-  Close the filter grill.

Exhaust filter reference number:
Menalux D09.

Troubleshooting

- **Power:** If the electric power does not come on, **disconnect from mains** and check plugs, cable and fuses where appropriate.
- **Blockages/dirty filters:** The cleaner may switch itself off in the event of a severe blockage or excessively dirty filter(s). In such cases, disconnect from mains and allow to cool for 20-30 minutes. Clear blockage and/or replace filter(s) and restart. The clearing of blocked hoses is not covered by the guarantee. Please also see AEG-Electrolux additional information in the separate AEG-Electrolux Warranty Booklet.
- **Water:** If water is sucked into the cleaner the motor must be changed at an AEG-Electrolux Service Centre.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg-electrolux.com>

© Copyright by AEG

T4003 02 06 02



From the Electrolux Group.

The world's No.1 choice.