

CONTENTS

1. SAFETY INFORMATION.....	3
2. SAFETY INSTRUCTIONS.....	4
3. PRODUCT DESCRIPTION.....	6
4. CONTROL PANEL.....	6
5. PROGRAMMES	8
6. CONSUMPTION VALUES.....	10
7. OPTIONS.....	11
8. SETTINGS.....	13
9. BEFORE FIRST USE.....	13
10. DAILY USE.....	14
11. HINTS AND TIPS.....	18
12. CARE AND CLEANING.....	20
13. TROUBLESHOOTING.....	24
14. EMERGENCY DOOR OPENING.....	27
15. TECHNICAL DATA.....	27

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com/webselfservice



Register your product for better service:
www.registerelectrolux.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information

 General information and tips

 Environmental information

Subject to change without notice.

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety- Gulf Market

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- Do not change the specification of this appliance.
- Do not exceed the maximum load of 10 kg (refer to the "Programme chart" chapter).
- The operating water pressure at the water entry point from the outlet connection must be between 0.5 bar (0.05 MPa) and 8 bar (0.8 MPa).
- The ventilation opening in the base (if applicable) must not be covered by a carpet, mat, or any floor covering.

- The appliance must be connected to the water mains using the new supplied hose sets, or other new hose sets supplied by the Authorised Service Centre.
- Old hose sets must not be reused.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.
- Do not use high pressure water sprays and/or steam to clean the appliance.
- Clean the appliance with a moist cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

2. SAFETY INSTRUCTIONS

2.1 Installation

- Remove all the packaging and the transit bolts.
- Keep the transit bolts in a safe place. If the appliance is to be moved in future they must be reattached to lock the drum to prevent internal damage.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use a damaged appliance.
- Follow the installation instruction supplied with the appliance.
- Do not install or use the appliance where the temperature can be less than 0°C or where it is exposed to the weather.
- The floor area where the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Adjust the feet to have the necessary space between the appliance and the flooring.

- Do not install the appliance where the appliance door cannot be fully opened.
- Do not put a container to collect possible water leakage under the appliance. Contact the Authorised Service Centre to ensure which accessories can be used.

2.2 Electrical connection

- The appliance must be earthed.
- Always use a correctly installed shockproof socket.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is

access to the mains plug after the installation.

- Do not touch the mains cable or the mains plug with wet hands.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- This appliance complies with the E.E.C. Directives.

2.3 Water connection

- Do not cause damage to the water hoses.
- Before connection to new pipes, pipes not used for a long time, where repair work has been carried out or new devices fitted (water meters, etc.), let the water flow until it is clean and clear.
- Ensure that there are no visible water leaks during and after the first use of the appliance.

2.4 Use



WARNING!
Risk of injury, electrical shock, fire, burns or damage to the appliance.

- This appliance is for household use only.
- Follow the safety instructions on the detergent packaging.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.

- Make sure that all metal objects are removed from the laundry.
- Do not touch the glass door while a programme is in operation. The glass can get hot.

2.5 Internal lights



WARNING!
Risk of injury.

- Visible LED radiation, do not look directly into the beam.
- The LED lamp is dedicated to drum lighting. This lamp cannot be reused for other lighting purposes.
- To replace the internal light, contact the Authorised Service Centre.

2.6 Disposal




WARNING!
Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

3. PRODUCT DESCRIPTION

3.1 Appliance overview

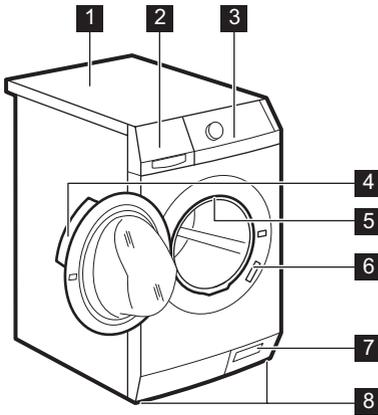

- 1 Worktop
- 2 Detergent dispenser
- 3 Control panel
- 4 Door handle
- 5 Internal light
- 6 Rating plate
- 7 Drain pump filter
- 8 Feet for levelling the appliance


3.2 Fixing plate kit (4055171146)

Available from your authorised dealer.
If you install the appliance on a plinth, secure the appliance in the fixing plates.

Read carefully the instructions supplied with the accessory.

4. CONTROL PANEL


4.1 Control panel description

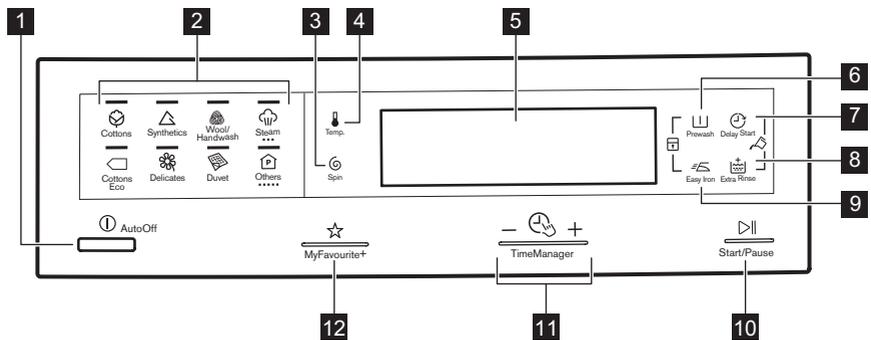

- 1 On Off button (AutoOff)
- 2 Programme touchpads
- 3 Spin reduction touchpad (Spin)
- 4 Temperature touchpad (Temperature)
- 5 Display
- 6 Prewash touchpad (Prewash)
- 7 Delay Start
- 8 Easy Iron
- 9 Extra Rinse
- 10 Start/Pause
- 11 TimeManager
- 12 MyFavourite+

- 7** Delay start touchpad  (Delay Start)
- 8** Extra rinse touchpad  (Extra Rinse)
- 9** Easy iron touchpad  (Easy Iron)
- 10** Start/Pause touchpad  (Start/Pause)
- 11** Time Manager touchpads    (TimeManager)
- 12** Favourite programme touchpad  (MyFavourite+)

4.2 Display

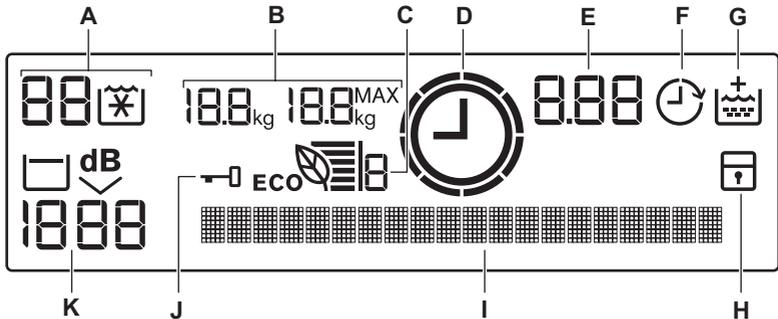

- A.** The temperature area:
- 88:** Temperature indicator.
 - : Cold water indicators.
- B.** **18.8_{kg}**: Laundry weight indicator.
18.8^{MAX}_{kg}: Maximum load indicator.
 The display shows these indicators when the door is open.
- C.** : Eco Info indicator.
- D.** : Time Manager indicator.
- E.** The time area:
- 1.25:** The programme duration.
 - 2h:** The delay start.
 - : Programme is completed.
- F.** : Delay start indicator.
- G.** : Extra Rinse indicator.
- H.** : The indicator of child lock on when you activate this device.
- I.** The text bar. The text bar shows the programme status, alarm messages and other messages that help you to operate with the appliance.
- J.** : Door locked indicator.
 You cannot open the appliance door when the indicator is on.
 You can open the door only when the indicator goes off.
- K.** The spin area:
- 1888:** Spin speed indicator.
 - : No Spin indicator.
 - : Rinse Hold indicator.
 - : Extra Silent indicator.

5. PROGRAMMES

5.1 Programme Chart

Programme Temperature range	Maximum load Maximum spin speed	Programme description (Type of load and soil level)
Washing programmes Press a programme touchpad one time to set the related programme:		
 Cottons 90°C - Cold	10 kg 1400 rpm	White cotton and coloured cotton. Normal soil and light soil.
 Cottons Eco 60° - 40° C	10 kg 1400 rpm	White cotton and fast-coloured cotton. Normal soil. The energy consumption decreases and the time of the washing programme is extended. This programme at 60 °C is the reference programme for energy label data, in compliance with UAE. S 5010 2:2013.
 Synthetics 60° - Cold	4 kg 1200 rpm	Synthetic items or mixed fabric items. Normal soil.
 Delicates 40° - Cold	4 kg 1200 rpm	Delicate fabrics such as acrylics, viscose, polyester items. Normal soil.
 Wool/Handwash 40° - Cold	2 kg 1200 rpm	Machine washable wool, hand washable wool and delicate fabrics with «hand washing» care symbol. ¹⁾
 Duvet 60° - 30°	4 kg 800 rpm	Special programme for one synthetic blanket, duvet, bedspread and so on.
 Steam Press again and again this touchpad until you set the desired programme: Steam programmes²⁾		
<p>Steam can be used for dried, washed or worn once laundry. These programmes can reduce creases and odours and make your laundry softer.</p> <p>Do not use any detergent. If necessary, remove stains by washing or using localized stain removal.</p> <p>Steam programmes do not perform any hygienic cycle.</p> <p>Do not set a Steam programme with these types of items:</p> <ul style="list-style-type: none"> • Items to be washed at a temperature lower than 40°C. • Items where it is not specified on the care label as being suitable for tumble drying. • All items with plastic, metal, wooden parts or alike. 		

Programme								
	■	■	■	■	■	■		■
	■	■	■	■		■		
	■						■	
14 min.	■	■	■					■
Sport Light	■	■						■
Jeans	■	■	■		■			■
Rinse	■	■	■					■
Spin/Drain ¹⁾	■	■					■	

¹⁾ Set the spin speed. Make sure it is suitable for the type of fabric being washed. If you set the No Spin option then only the drain phase is available.

5.2 Woolmark Apparel Care - Blue



Company for the washing of wool garments labelled as «hand wash» provided that the garments are washed according to the instructions issued by the manufacturer of this washing machine. Follow the garment care label for drying and other laundry instructions. M1144

In UK, Eire, Hong Kong and India the Woolmark symbol is a certification trademark.

The wool wash cycle of this machine has been approved by The Woolmark

6. CONSUMPTION VALUES



The data in this table are approximate. Different variables can affect the data: the quantity and type of laundry, the water and ambient temperature.



At the start of the programme, the display shows the programme duration for the maximum load capacity.

During the washing phase the programme duration is automatically calculated and can be greatly reduced if the laundry load is lower than the maximum load capacity (e.g. Cotton 60°C, maximum load capacity 10 kg, the programme duration exceeds 2 hours; actual load 1 kg, the programme duration will be less than 1 hour).

When the appliance is calculating the real programme duration a dot flashes in the display.

Programmes	Load (kg)	Energy consumption (kWh)	Water consumption (litre)	Approximate programme duration (minutes)
Cottons 60°C	10	1,80	82	185
Cottons Eco 60°C ¹⁾	10	1,13	58	249
Cottons 40°C	10	1,10	82	185
Synthetics 40°C	4	0,60	55	100
Delicates 40°C	4	0,70	62	86
Wool/Handwash 30°C	2	0,50	59	60

¹⁾ This programme at 60 °C is the reference programme for energy label data, in compliance with UAE. S 5010 2:2013.

Off Mode (W)	Left On Mode (W)
0.05	0.05

The data in this chart are measured according to IEC 62301.

7. OPTIONS

7.1 Temperature

Set this option to change the default temperature.

Indicator – – = cold water.

The display shows the set temperature.

7.2 Prewash

With this option you can add a prewash phase to a washing programme.

Use this option for heavy soil.

When you set this option the programme duration increases.

The related indicator comes on.

7.3 Delay Start

With this option you can delay the start of a programme from 30 minutes to 20 hours.

The display shows the related indicator.

The appliance starts working and the lid is locked.

After a few minutes the lid can be opened.

7.4 Extra Rinse

With this option you can add some rinses to a washing programme.

Use this option for persons allergic to detergents and in areas where the water is soft.

The related indicator comes on.

7.5 Easy Iron

The appliance carefully washes and spins the laundry to prevent the creases.

The appliance decreases the spin speed, uses more water and adapts the programme duration to the type of laundry.

The related indicator comes on.

7.6 Time Manager

When you set a washing programme, the display shows the default duration.

Press  or  to decrease or increase the programme duration.

The Time Manager is available only with the programmes in the table.

Indicator				Cottons Eco	 1)	 1)
 2)	■	■				■
	■	■	■			■
	■	■				■
	■	■	■	■	■	■
	■	■				■
	■ 3)	■ 3)	■			■ 3)
	■	■				■

Indicator				Cottons Eco	 1)	 1)
 4)	■	■	■ 3)	■ 3)	■	■ 3)

- 1) If available.
- 2) Shortest: to fresh the laundry.
- 3) Programme default duration.
- 4) Longest: Increasing the programme duration gradually decreases the energy consumption. The optimized heating phase saves energy and the longer duration maintains the same washing results (specially for normal soil).

Eco Info

The Eco Info stripes (available only in cotton and synthetics programmes) show the efficiency of the washing programme in terms of energy saving:

- 6 stripes: the most efficient setting to optimize the washing programme performance.
- 1 stripe: the less efficient setting.

The number of Eco Info stripes changes if you modify the duration of the washing programme (refer to Time Manager), the washing temperature and the laundry weight. To optimize the washing programme performance, the stripe number must increase:

- If you increase the programme duration, the Eco Info stripes increases. The increasing the washing programme duration allows a constant performance that reduces the energy consumption.
- If you decrease the washing temperature, the Eco Info stripes increases.
- If you put more clothes, the Eco Info stripes increases.

Some advices to have the most efficient setting:

- Put a laundry load of 4 kg or more.

- Set the Time Manager indicators  or .
- Set the possible lower washing temperature.
- Do not set the Prewash option.

7.7 MyFavourite+☆

The first time you activate the appliance, if you press My Favourite+ the display shows that the memory is empty.

The appliance can memorise automatically the most used washing programmes after some uses.

Press My Favourite+ to set one of the 3 most used washing programmes.

Press My Favourite+ one time to set My Favourite 1.

Press My Favourite+ two times to set My Favourite 2.

Press My Favourite+ three times to set My Favourite 3.

Press  to start the washing programme.



The appliance does not do the permanent option, if it is not activate.
The delay start is not memorised.

8. SETTINGS

8.1 Child Lock

With this option you can prevent that the children play with the control panel.

- To **activate/deactivate** this option, press  and  at the same time until the indicator  **comes on/goes off**.

You can activate this option:

- After you press : the options and the programme knob are locked.
- Before you press : the appliance cannot start.

8.2 Permanent Extra Rinse

With this option you can permanently have an extra rinse when you set a new programme.

- To **activate/deactivate** this option press  and  at the same time

until the indicator  **comes on/goes off**.

8.3 Acoustic signals

The acoustic signals operate when:

- The programme is completed.
- The appliance has a malfunction.

To **deactivate/activate** the acoustic signals, press  and  at the same time for 6 seconds.



If you deactivate the acoustic signals, they continue operate when the appliance has a malfunction.

8.4 Weight sensor activating or deactivating

To activate or deactivate the weight sensors, press  and  at the same time for some seconds.

9. BEFORE FIRST USE

1. Put a small quantity of detergent in the compartment for washing phase.
2. Set and start a programme for cotton at the highest temperature without laundry.

This removes all possible dirt from the drum and the tub.

9.1 Language setting

The display has a default language.

The first time you press the button  to activate the appliance, the display tells you to change the language setting.

1. Press  or  to set the language you prefer.
2. Press  to confirm the language.

If no language is set after several seconds the appliance operates with the default language. Until you don't set a language, the display asks you to set a language each time you activate appliance.

9.2 Change the language after the first activation

1. Press  and  at the same time for some seconds to enter the language setting
2. Press  or  to set the language you prefer.
3. Press  to confirm the language.

9.3 Detergent quantity setting

The text bar also gives the indication about the detergent quantity, when the

door is closed after the laundry load. By default, the detergent quantity indication is given as a percentage. 100% is the maximum detergent quantity that you can put in the compartment  of the detergent drawer.

You can set the indication as ml to have more precision.

The display can give the indication for 2 types of detergent (powder or liquid):

1. Press  and  at the same time for some seconds.

The message "**Set dosage det 1**" comes on in the text bar.

2. Press  or  to set the data as ml that agrees with 100%. For the maximum detergent quantity see the detergent container.

3. Press  to confirm.

The message "**Set dosage det 2**" comes on in the text bar.

4. Press  or  to set the data as ml that agrees with 100%. For the maximum detergent quantity see the detergent container.

5. Press  to confirm.

10. DAILY USE

10.1 Using weight sensors



For a correct use of the weight sensor, the drum must be empty when activating the appliance. Set the programme BEFORE you put the laundry in the drum.

10.2 Activating the appliance

Press the  button to activate or deactivate the appliance. A tune sounds when the appliance is activated.

10.3 Setting a programme

1. Press one of the programme touchpad to set the necessary programme:

- The indicator  flashes.
 - The related programme indicator comes on.
 - The display shows all information about washing programme.
2. If necessary, change the temperature, the spin speed, the cycle duration, or add available options.

When you activate an option, the indicator of the set option comes on.



If you set something incorrect, the display shows that the selection is not possible.

10.4 Loading the laundry

1. Open the appliance door.


The display shows the weight of the laundry 18.8_{kg} and the maximum programme load $18.8^{\text{MAX}}_{\text{kg}}$. The text bar tells to add the laundry.

- Put the laundry in the drum, one item at a time. Shake the items before you put them in the appliance.

On the display, the weight of the laundry updates by steps of kg 0,5. The weight is a general indication that changes with the type of the laundry.

i In the programmes with the maximum declared load, if you put too much laundry, the text bar tells that the load is completed. In the other programmes, the **MAX** indicator flashes and the text bar tells that the maximum load is exceeded. To have the best consumption and performance remove some items.

- Close the door firmly. The text bar shows the quantity of detergent to use. If you have set the “**Set dosage det 1**” and “**Set dosage det 2**”, the display gives the alternative between two types of detergent.

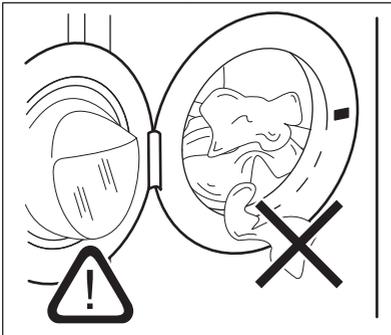

10.6 Detergent compartments


! **CAUTION!** Use only specified detergents for washing machine.

i Always obey the instructions that you find on the packaging of the detergent products.

! **CAUTION!** Make sure that no laundry stays between the seal and the door. There is a risk of water leakage or damage to the laundry.


10.5 Using detergent and additives

- Measure out the detergent and the fabric conditioner.
- Put the detergent and the fabric conditioner into the compartments.
- Carefully close the detergent drawer

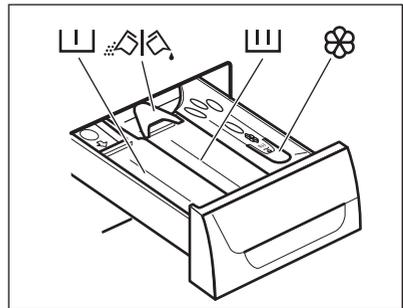

	Detergent compartment for prewash phase.
	Detergent compartment for washing phase.
	Compartment for liquid additives (fabric conditioner, starch).
	Flap for powder or liquid detergent.

10.7 Liquid or powder detergent

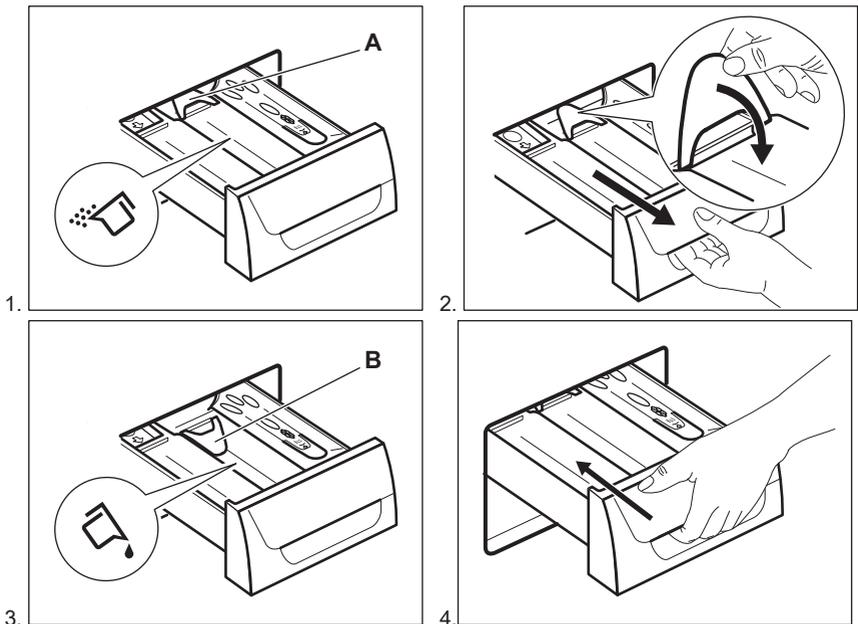

- Position **A** for powder detergent (factory setting).
- Position **B** for liquid detergent.



When you use the liquid detergent:

- Do not use gelatinous or thick liquid detergents.
- Do not put more liquid than the maximum level.
- Do not set the prewash phase.
- Do not set the delay start.

10.8 Starting a programme without the delay start

Press the .

- The indicator of the  stops to flash and stays on.
- The display updates accordingly during the washing programme.

- The programme starts, the door locks, the display shows the indicator .
- If the indicator  flashes, the door is locking. If the display shows an alarm message after the indicator  has flashed for a few seconds, it indicates that the door is not properly locked (for more details see Troubleshooting chapter).
- The drain pump can operate for a short time when the appliance fills water.

-  After approximately 15 minutes from the start of the programme:
- The appliance adjusts automatically the programme duration agree with the laundry load.
 - The display shows the new value.

10.9 Starting a programme with the delay start

1. Press  again and again until the display shows the delay you want to set.
- The related indicator comes on the display.

2. Press :
 - The appliance starts the countdown.
 - The door locks, the display shows the indicator .

If the indicator  flashes, the door is locking. If the display shows an alarm message after the indicator  has flashed for a few seconds, it indicates that the door is not properly locked (for more details see Troubleshooting chapter).

 - When the countdown is completed, the programme starts automatically.

-  You can cancel or change the set of the delay start before you press the . To cancel the delay start:
- Press  to set the appliance to pause.
 - Press  until the display shows .
 - Press  again to start the programme immediately.

10.10 Interrupting a programme and changing the options

You can change only some options before they operate.

1. Press .
- The indicator flashes.
2. Change the options.
 3. Press  again.
- The programme continues.

10.11 Cancelling a running programme

1. Press the button  for some seconds to cancel the programme and to deactivate the appliance.
2. Press the same button again to activate the appliance. Now, you can set a new washing programme.

-  Before starting the new programme the appliance could drain the water. In this case, make sure that the detergent is still in the detergent compartment, if not fill the detergent again.

10.12 Opening the door



CAUTION!

If the temperature and level of the water in the drum are too high and the drum still rotates, you cannot open the door.

While a programme or the delay start operates, the appliance door is locked and the display shows the indicator .

Open the appliance door when the programme or the delay start operates:

1. Press  to pause the appliance.
2. Wait until the door lock indicator  goes off.
3. Open the door.
4. Close the door and press again . The programme or delay start continues to operate.

10.13 At the end of the programme

- The appliance stops automatically.
- The acoustic signal operates (if it is activated).
- In the display  comes on.
- The indicator of the Start/Pause goes off.
- The door lock indicator  goes off.
- You can open the door.
- Remove the laundry from the appliance. Make sure that the drum is empty.
- Close the water tap.
- Press the button AutoOff for some seconds to deactivate the appliance.
- Keep the door ajar, to prevent the mildew and odours.

The washing programme is completed, but there is water in the drum:

- The drum turns regularly to prevent the creases in the laundry.
- The door lock indicator  is on. The door stays locked.
- You must drain the water to open the door.

To drain the water:

1. Press . The appliance drains the water and spins.
2. To make the appliance drain only, set . If necessary, decrease the spin speed.
3. When the programme is completed and the door lock indicator  goes off, you can open the door.
4. Press the button AutoOff for some seconds to deactivate the appliance.

 The appliance drains and spins automatically after approximately 18 hours (except for Wool programme).

10.14 AUTO OFF option

The AUTO OFF function automatically deactivates the appliance to decrease the energy consumption when:

- You do not use the appliance for 5 minutes before you press . Press the button  to activate the appliance again.
- After 5 minutes from the end of the washing programme Press the button  to activate the appliance again. The display shows the end of the last set programme. Turn the programme knob to set a new cycle.

 If you set a programme or an option that ends with water in the drum, the AUTO OFF function **doesn't deactivate** the appliance to remind you to drain the water.

11. HINTS AND TIPS



WARNING!
Refer to Safety chapters.

11.1 The laundry load

- Divide the laundry in: white, coloured, synthetics, delicates and wool.
- Obey the washing instructions that are on the laundry care labels.

- Do not wash white and coloured items together.
- Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times.
- Button up pillowcases, close zippers, hooks and poppers. Tie up belts.
- Empty the pockets and unfold the items.
- Turn multilayered fabrics, wool and items with painted illustrations inside out.
- Remove hard stains.
- Wash heavy soil stains with a special detergent.
- Be careful with the curtains. Remove the hooks and put the curtains in a washing bag or pillowcase.
- Do not wash laundry without hems or with cuts. Use a washing bag to wash small and/or delicate items (e.g. underwired bras, belts, tights, etc.).
- A very small load can cause balance problems with the spin phase. If this occurs, adjust manually the items in the tub and start the spin phase again.

11.2 Stubborn stains

For some stains, water and detergent is not sufficient.

We recommend that you pre-treat these stains before you put the items in the appliance.

Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric.

11.3 Detergents and additives

- Only use detergents and additives specially made for washing machines:
 - powder detergents for all types of fabric,
 - powder detergents for delicate fabrics (40 °C max) and woollens,
 - liquid detergents, preferably for low temperature wash

programmes (60 °C max) for all types of fabric, or special for woollens only.

- Do not mix different types of detergents.
- To help the environment, do not use more than the correct quantity of detergent.
- Obey the instructions that you find on the on packaging of these products.
- Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil.
- If your appliance does not have the detergent dispenser with the flap device, add the liquid detergents with a dosing ball (supplied by the detergent's manufacturer).

11.4 Ecological hints

- Set a programme without the prewash phase to wash laundry with normal soil.
- Always start a washing programme with the maximum load of laundry allowed.
- If necessary, use a stain remover when you set a programme with a low temperature.
- To use the correct quantity of detergent, check the water hardness of your domestic system. Refer to "Water hardness".

11.5 Water hardness

If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water hardness is soft it is not necessary to use a water softener.

To know the water hardness in your area, contact your local water authority.

Use the correct quantity of the water softener. Obey the instructions that you find on the packaging of the product.

12. CARE AND CLEANING



WARNING!
Refer to Safety chapters.

12.1 External cleaning

Clean the appliance with soap and warm water only. Fully dry all the surfaces.



CAUTION!
Do not use alcohol, solvents or chemical products.

12.2 Descaling

If the water hardness in your area is high or moderate, we recommend that you use a water descaling product for washing machines.

Regularly examine the drum to prevent limescale and rust particles.


To remove rust particles use only special products for washing machines. Do this separately from the laundry wash.




Always obey the instructions that you find on the packaging of the product.

12.5 Cleaning the detergent dispenser

1.

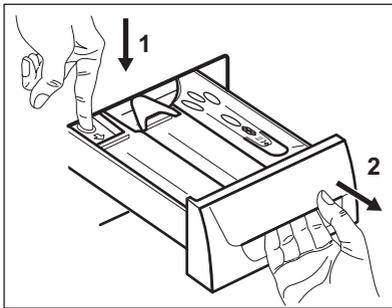

2.

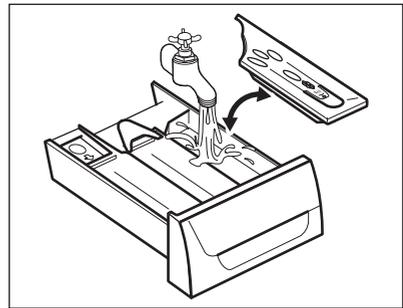


12.3 Maintenance wash

With the low temperature programmes it is possible that some detergent stays in the drum. Perform a maintenance wash regularly. To do this:


- Remove all laundry from the drum.
- Select the cotton programme with the highest temperature with a small quantity of detergent.

12.4 Door seal

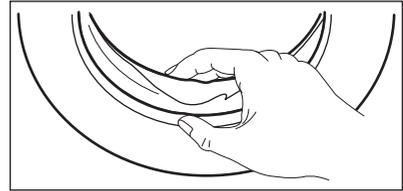


Regularly examine the seal and remove all objects from the inner part.

3.

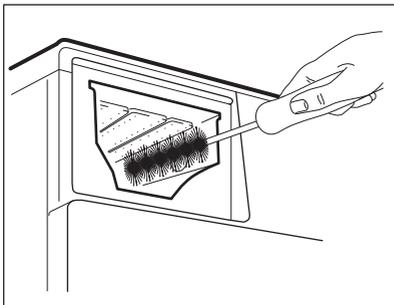

4.

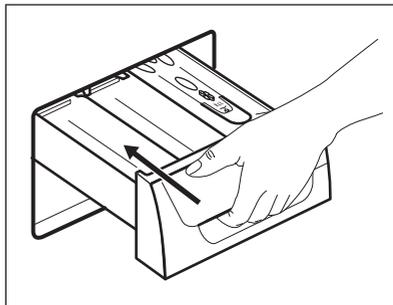


12.6 Cleaning the drain filter




Do not clean the drain filter if the water in the appliance is hot.


1.

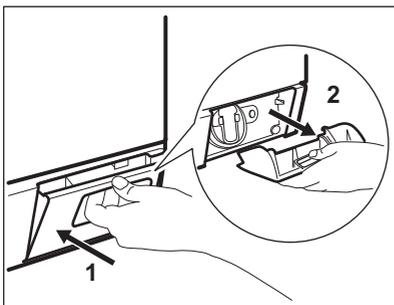


2.

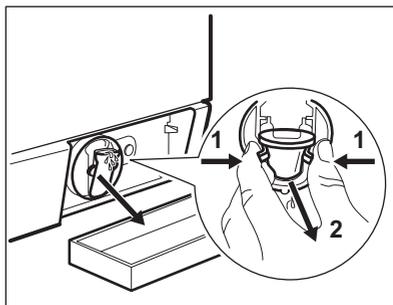


3.

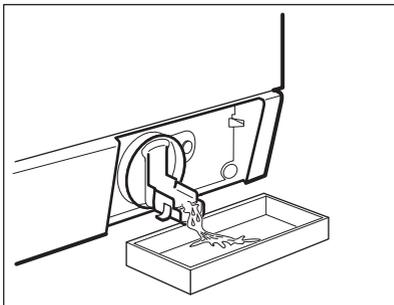


4.

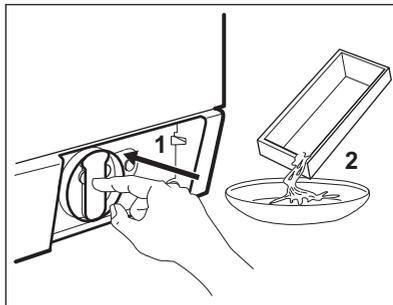


5.

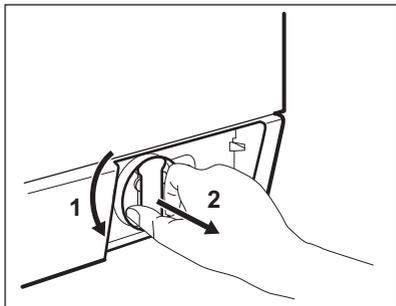


6.

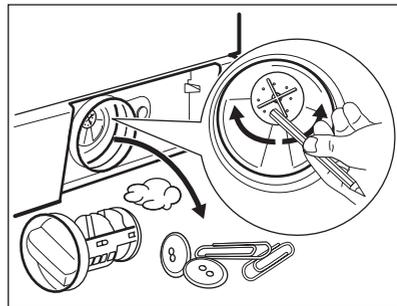


7.

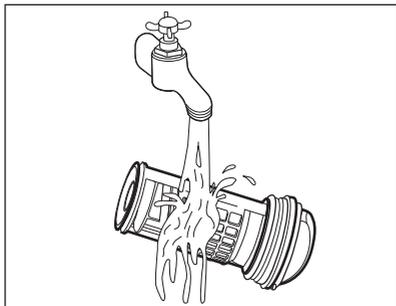

8.

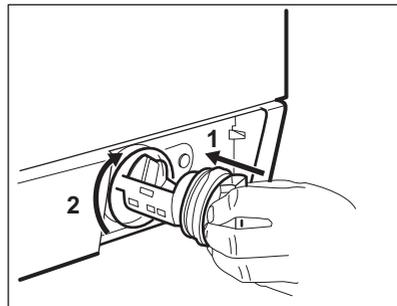


9.

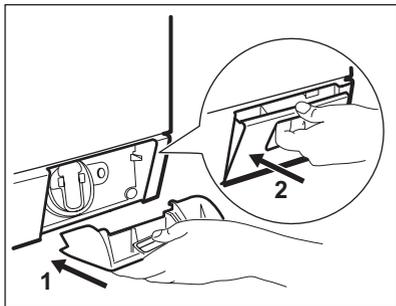


12.7 Cleaning the inlet hose and the valve filter


1.

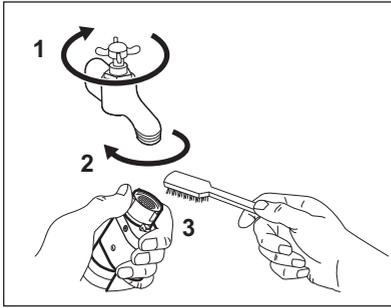


2.

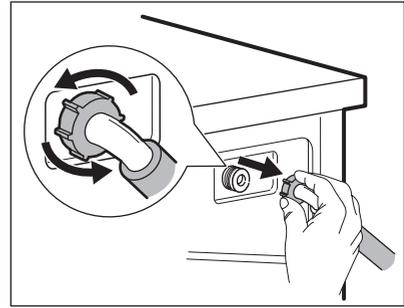

3.

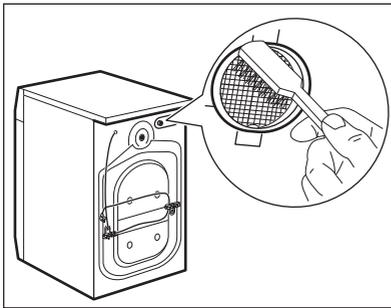

4.

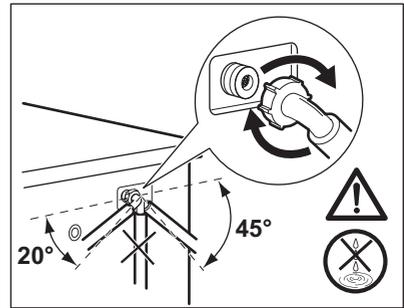

12.8 Emergency drain

Because of a malfunction, the appliance cannot drain the water.

If this occurs, do steps (1) through (9) of 'Cleaning the drain filter'. If necessary, clean the pump.

When you drain the water with the emergency drain procedure, you must activate the drain system again:

1. Put 2 litres of water in the main wash compartment of the detergent dispenser.
2. Start the programme to drain the water.

12.9 Frost precautions

If the appliance is installed in an area where the temperature can be less than

0° C, remove the remaining water from the inlet hose and the drain pump.

1. Disconnect the mains plug from the mains socket.
2. Close the water tap.
3. Put the two ends of the inlet hose in a container and let the water flow out of the hose.
4. Empty the drain pump. Refer to the emergency drain procedure.
5. When the drain pump is empty, install the inlet hose again.



WARNING!

Make sure that the temperature is higher than 0 °C before you use the appliance again.

The manufacturer is not responsible for damages caused by low temperatures.

13. TROUBLESHOOTING



WARNING!
Refer to Safety chapters.

13.1 Introduction

The start of the appliance does not occur or it stops during operation.


First try to find a solution to the problem (refer to the table). If not, contact the Authorised Service Centre.

With some problems, the acoustic signals operate and the display shows an alarm code:

- Check the tap - The appliance does not fill with water properly.
- Check drain filter - The appliance does not drain the water.
- Check the door - The appliance door is open or not closed correctly.



If the appliance is overloaded, remove some items from the drum and/or keep pressed the door and touch the Start/Pause button at the same time until the indicator  stops flashing (see the following picture).

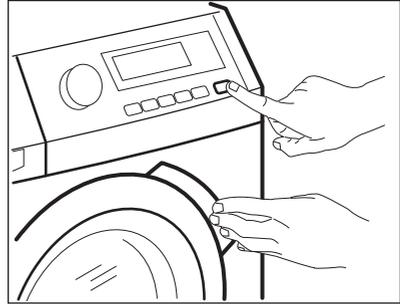

- Water safety alert - The anti-flood device is on. Disconnect the appliance. Close the water tap. Contact the Authorised Service Centre.
- Unstable mains supply - The mains supply is unstable. Wait until the mains supply is stable.
- Detergent overdosing - Reduce the detergent quantity.



WARNING!
Deactivate the appliance before you do the checks.

13.2 Possible failures

Problem	Possible solution
The programme does not start.	Make sure that the mains plug is connected to the mains socket.
	Make sure that the appliance door is closed.
	Make sure that there is not a damaged fuse in the fuse box.
	Make sure that the Start/Pause has been pressed.
	If the delay start is set, cancel the setting or wait for the end of countdown.
	Deactivate the Child Lock function if it is on.
The appliance does not fill with water properly.	Make sure that the water tap is open.

Problem	Possible solution
	Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority.
	Make sure that the water tap is not clogged.
	Make sure that the filter of the inlet hose and the filter of the valve are not clogged. Refer to "Care and cleaning".
	Make sure that the inlet hose has no kinks or bends.
	Make sure that the connection of the water inlet hose is correct.
The appliance does not fill with water and drain immediately.	Make sure that the drain hose is in the correct position. The hose may be too low.
The appliance does not drain the water.	Make sure that the sink spigot is not clogged.
	Make sure that the drain hose has no kinks or bends.
	Make sure that the drain filter is not clogged. Clean the filter, if necessary. Refer to "Care and cleaning".
	Make sure that the connection of the drain hose is correct.
	Set the drain programme if you set a programme without drain phase.
	Set the drain programme if you set an option which ends with water in the tub.
The spin phase does not operate or the washing cycle lasts longer than usually.	Set the spin option. Set the drain option if you set an option which ends with water in the drum.
	Make sure that the drain filter is not clogged. Clean the filter, if necessary. Refer to "Care and cleaning".
	Adjust manually the items in the tub and start the spin phase again. This problem may be caused by balance problems.
There is water on the floor.	Make sure that the couplings of the water hoses are tight and there is not water leakages.
	Make sure that the drain hose have no damages.
	Make sure you use the correct detergent and the correct quantity of it.
You cannot open the appliance door.	Make sure that the washing programme is finished.

Problem	Possible solution
	Set the drain or the spin programme if there is water in the drum.
	Make sure that the appliance receives electrical power.
	This problem may be caused by a failure of the appliance. Contact the Authorised Service Centre. If you need to open the lid, please read carefully "Emergency door opening".
The appliance makes an unusual noise.	Make sure the levelling of the appliance is correct. Refer to "Installation".
	Make sure that the packaging and/or the transit bolts are removed. Refer to "Installation".
	Add more laundry in the drum. The load may be too small.
The cycle is shorter than the time displayed.	The appliance calculates a new time according to the laundry load. See the "Consumption Values" chapter.
The cycle is longer than the time displayed.	An unbalanced laundry load increases the duration time. This is a normal behaviour of the appliance.
The washing results are not satisfactory.	Increase the detergent quantity or use a different detergent.
	Use special products to remove the stubborn stains before you wash the laundry.
	Make sure that you set the correct temperature.
	Decrease the laundry load.
You cannot set an option.	Make sure that you press only the wanted button(s).
The drum is empty and the display shows there is some weight in.	Press button Auto Off to deactivate the appliance and activate it again to set a tare.
The drum is full but the display shows 0.0 kg.	You loaded the laundry before activating the appliance. Press button Auto Off to deactivate the appliance. Empty the drum and obey to the necessary steps. (Refer to 'Loading the laundry')
The drum light does not go on.	Make sure that you activate the appliance. Refer to "Daily Use".

After the check, activate the appliance. The programme continues from the point of interruption.

If the problem occurs again, contact the Authorised Service Centre.

If the display shows other alarm codes. Deactivate and activate the appliance. If the problem continues, contact the Authorised Service Centre.

14. EMERGENCY DOOR OPENING

In case of power failure or functioning failure the appliance door remains locked. The washing programme continues when the power is restored. If the door remains locked in case of failure, it is possible to open it using the emergency unlock function.

Before opening the door:



CAUTION!

Make sure that the water temperature is not too high and the laundry is not hot. If necessary, wait until they cool down.



CAUTION!


Make sure that the drum is not rotating. If necessary, wait until the drum stops rotating.



Make sure that the water level inside the drum is not too high. If necessary, proceed with an emergency drain (refer to «Emergency drain» in «Care and cleaning» chapter).

To open the door, proceed as follows:

1. Press the AutoOff button to switch the appliance off.
2. Disconnect the mains plug from the mains socket.
3. Open the filter flap.
4. Keep the emergency unlock trigger pulled downward and, at the same time, open the appliance door.

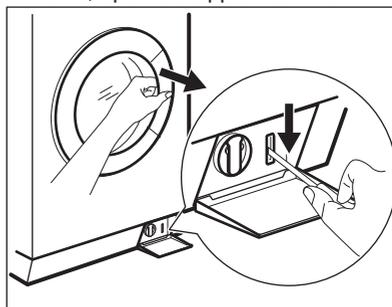

5. Take out the laundry and then close the appliance door.
6. Close the filter flap.

15. TECHNICAL DATA

Dimension	Width/ Height/ Depth/ Total depth	600 mm/ 850 mm/ 605 mm/ 639 mm
Electrical connection	Voltage Overall power Fuse Frequency	220 - 240 V 2200 W 13 A 50 Hz
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture		IPX4
Water supply pressure	Minimum Maximum	0,5 bar (0,05 MPa) 8 bar (0,8 MPa)
Water supply ¹⁾		Cold water
Maximum Load	Cotton	10 kg

Energy Efficiency Class		A+++
Spin Speed	Maximum	1400 rpm

1) Connect the water inlet hose to a water tap with a 3/4" thread.

16. ENVIRONMENTAL CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances

marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.electrolux.com/shop



132895891-A-382016

