



CONTENTS

| | |
|---------------------------------------|----|
| 1. SAFETY INFORMATION..... | 3 |
| 2. SAFETY INSTRUCTIONS..... | 5 |
| 3. PRODUCT DESCRIPTION..... | 7 |
| 4. CONTROL PANEL..... | 8 |
| 5. PROGRAMMES | 9 |
| 6. CONSUMPTION VALUES..... | 14 |
| 7. OPTIONS..... | 14 |
| 8. SETTINGS..... | 16 |
| 9. BEFORE FIRST USE..... | 16 |
| 10. DAILY USE - WASHING ONLY..... | 17 |
| 11. DAILY USE - DRYING ONLY..... | 21 |
| 12. DAILY USE - WASHING & DRYING..... | 22 |
| 13. HINTS AND TIPS..... | 23 |
| 14. CARE AND CLEANING..... | 25 |
| 15. TROUBLESHOOTING..... | 29 |
| 16. EMERGENCY DOOR OPENING..... | 32 |
| 17. TECHNICAL DATA..... | 32 |

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:

www.electrolux.com/webselfservice



Register your product for better service:

www.registerelectrolux.com



Buy Accessories, Consumables and Original spare parts for your appliance:


www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information

 General information and tips

 Environmental information

Subject to change without notice.

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety- Gulf Market



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- Do not change the specification of this appliance.
- The appliance shall be installed as a freestanding product or below the kitchen worktop if space margins permit.

- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- Ensure good air ventilation in the room where the appliance is installed to avoid the backflow of unwanted gases into the room from appliances burning gas or other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from any appliances burning gas or other fuels.
- The operating water pressure at the water entry point from the outlet connection must be between 0.5 bar (0.05 MPa) and 8 bar (0.8 MPa).
- Do not exceed the maximum load of 7 kg (refer to the "Programme chart" chapter).
- The appliance must be connected to the water mains using the new supplied hose sets, or other new hose sets supplied by the Authorised Service Centre.
- Old hose sets must not be reused.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Items that have been soiled with substances such as vegetable or mineral oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed separately with an extra amount of detergent before being dried in the washer dryer.

- Do not use the appliance if items have been soiled with industrial chemicals.
- Do not dry unwashed items in the wash dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, and rubber backed articles and clothes, or pillows fitted with foam rubber pads should not be dried in the washer dryer.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- Never stop the washer dryer before the end of the drying cycle unless all items are quickly removed and separated so that residual heat can dissipate.
- The final part of the washer dryer cycle takes place without heat (cool down cycle) to ensure that items reach a temperature that will not cause damage to them.
- Do not use high pressure water sprays and/or steam to clean the appliance.
- Clean the appliance with a moist cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

2. SAFETY INSTRUCTIONS

2.1 Installation



The installation must comply with relevant national regulations.

- Follow the installation instructions supplied with the appliance.
- Do not install or use the appliance where the temperature can be less than 0°C or where it is exposed to the weather.
- Always keep the appliance vertical when being moved.
- Make sure that there is air circulation between the appliance and the floor.
- Remove all the packaging and the transit bolts.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Keep the transit bolts in a safe place. If the appliance is to be moved in the future they must be reattached to lock

the drum to prevent an internal damage.

- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use a damaged appliance.
- Do not install the appliance where the appliance door cannot be fully opened.
- Adjust the feet to have the necessary space between the appliance and the flooring.
- When the appliance is in its permanent position, check that it is fully level with the aid of a spirit level. If it is not, adjust the feet accordingly.

2.2 Electrical Connection



WARNING!

Risk of fire and electric shock.

- The appliance must be earthed.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- This appliance complies with the E.E.C. Directives.

2.3 Water Connection

- Do not cause damage to the water hoses.
- Before connection to new pipes, pipes not used for a long time, where repair work has been carried out or new devices fitted (water meters, etc.), let the water flow until it is clean and clear.
- Ensure that there are no visible water leaks during and after the first use of the appliance.

2.4 Use



WARNING!

Risk of injury, electric shock, fire, burns or damage to the appliance.

- This appliance is for household use only.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the glass door while a programme is in operation. The glass can get hot.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Make sure that all metal objects are removed from the laundry.
- Only dry fabrics that are suitable to dry in the washer dryer. Follow the cleaning instruction on the item label.
- Plastic items are not heat resistant.
 - If a detergent ball is used, remove it before starting a drying programme.
 - Do not use a detergent ball if setting a non-stop programme.



WARNING!

Risk of injury or damage to the appliance.


- Do not sit or stand on the open door.
- Do not dry dripping wet clothes in the appliance.

2.5 Disposal

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

3. PRODUCT DESCRIPTION

3.1 Appliance overview

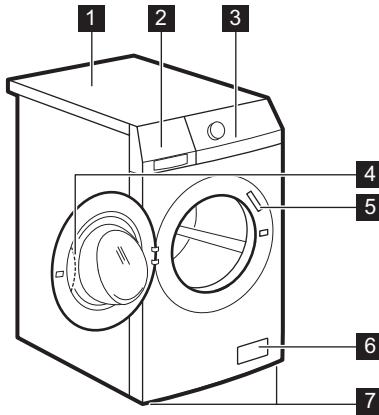


- 1** Worktop
- 2** Detergent dispenser
- 3** Control panel
- 4** Door handle
- 5** Rating plate
- 6** Drain pump filter
- 7** Feet for levelling the appliance

3.2 How to activate the child safety device

This device prevents children or pets from being closed in the drum.

Turn the device clockwise, until the groove is horizontal.
You cannot close the door.

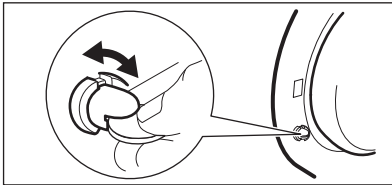

To close the door, turn the device anticlockwise until the groove is vertical.

3.3 Fixing plate kit (4055171146)


Available from your authorised dealer.

If you install the appliance on a plinth, secure the appliance in the fixing plates.

Read carefully the instructions supplied with the accessory.


4. CONTROL PANEL

4.1 Control panel description

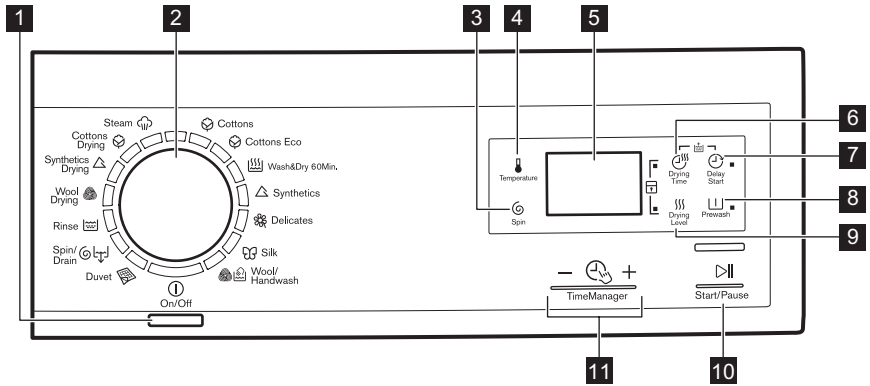

- 1** On Off push button (On/Off)
- 2** Programme knob
- 3** Spin reduction touch button (Spin)
- 4** Temperature touch button (Temperature)
- 5** Display
- 6** Drying time touch button (Drying time)
- 7** Delay start touch button (Delay Start)
- 8** Prewash touch button (Prewash)
- 9** Drying level touch button (Drying level)
- 10** Start/Pause touch button (Start/Pause)
- 11** Time Manager touch button (Time Manager)

4.2 Display

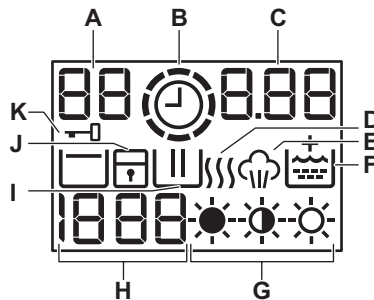









- A.** The Temperature area:
 - 88: Temperature indicator
 - : Cold water indicator
- B.** Time Manager indicator.
- C.** The time area:
 - 1.25: the programme duration




- : the delay start
 - : the alarm codes
 - : the message of error
 - : the programme is completed.
- D. : The drying phase.
- E. : The steam phase.
- F. : The permanent Extra rinse option.
- G. : The indicators of dryness level.
- H. The spin area:
- : the Spin speed indicator
 - : the No spin indicator
 - : the Rinse hold indicator
- I. : The washing phase.
- J. : The child safety lock indicator.
- K. : The door locked indicator

5. PROGRAMMES

5.1 Programme Chart

| Programme Temperature range | Maximum load Maximum spin speed | Programme description (Type of load and soil level) |
|------------------------------------|---------------------------------------|--|
| Washing programmes | | |
| Cottons 90°C - Cold | 7 kg 1400 rpm | White cotton and coloured cotton. Normal, heavy and light soil. |
| Cottons Eco 60°C - 40°C | 7 kg 1400 rpm | White cotton and fast-coloured cotton. Normal soil. The energy consumption decreases and the time of the washing programme is extended. This programme at 60 °C with a load of 7 kg is the reference programme for energy label data, in compliance with UAE. S 5010 2:2013. |
| Wash&Dry 60Min. 40°C - 30°C | 1 kg 1200 rpm | Complete programme composed of washing phase and of drying phase for a small load size of mixed fabrics (cottons and synthetics items). |
| Synthetics 60°C - Cold | 3,5 kg 1200 rpm | Synthetic items or mixed fabric items. Normal soil. |
| Delicates 40°C - Cold | 3,5 kg 1200 rpm | Delicate fabrics such as acrylics, viscose and mixed fabrics requiring gentler washing. Normal soil. |

| Programme Temperature range | Maximum load Maximum spin speed | Programme description (Type of load and soil level) |
|---|---------------------------------------|--|
|  Silk 30°C | 1 kg 1000 rpm | Special programme for silk and mixed synthetic items . |
|  Wool/Handwash 40°C - Cold | 1,5 kg 1200 rpm | Machine washable wool, hand washable wool and other fabrics with «hand washing» care symbol ¹⁾ . |
|  Duvet 60°C - Cold | 2 kg 800 rpm | Special programme for one synthetic blanket, duvet, bedspread and so on. |
|  Spin/Drain ²⁾ | 7 kg 1400 rpm | To spin the laundry and to drain the water in the drum. All fabrics, except woollens and delicate fabrics . |
|  Rinse Cold | 7 kg 1400 rpm | To rinse and spin the laundry. All fabrics , except woollens and very delicate fabrics. Reduce the spin speed accordingly to the type of laundry. |
| Drying programmes | | |
|  Wool Drying | 1 kg | Drying programme for woollens . |
|  Synthetics Drying | 2 kg | Drying programme for synthetic items . |
|  Cottons Drying | 4 kg | Drying programme for cotton items . |












| Programme Temperature range | Maximum load Maximum spin speed | Programme description (Type of load and soil level) |
|---|---------------------------------------|---|
| Steam programmes³⁾ | | |
| Steam can be used for dried, washed or worn once laundry. These programmes can reduce creases and odours and make your laundry softer. | | |
| Do not use any detergent. If necessary, remove stains by washing or using localized stain removal. | | |
| Steam programmes do not perform any hygienic cycle. | | |
| Do not set a Steam programme with these types of items: | | |
| <ul style="list-style-type: none"> • Items to be washed at a temperature lower than 40°C. • Items where it is not specified on the care label as being suitable for tumble drying. • All items with plastic, metal, wooden parts or alike. | | |
|  Steam | 1.5 kg | Steam programme for dewrinkling or refreshing cotton and synthetic items . Press the Time Manager buttons to select one of the available cycles: <ul style="list-style-type: none"> • Anti-crease  (default programme duration) • Refresh  (short programme duration) |



1) During this cycle the drum rotates slowly to ensure a gentle wash. It can seem that the drum doesn't rotate or doesn't rotate properly, but this is normal for this programme.

2) Set the spin speed. Make sure it is suitable for the type of fabric being washed. If you set the No Spin option then only the drain phase is available.

3) If you set a Steam programme with dried laundry, at the end of the cycle the laundry could be humid. It is better to expose the items to the fresh air for about 10 minutes to let the humidity dry. When the programme is completed, quickly remove the laundry from the drum. After a steam cycle, items may be ironed however with less effort.




Programme options compatibility

| Programme |  |  |  |  |  |  |
|---|---|---|---|---|---|--|
| Cottons  | ■ | ■ | ■ | ■ | ■ | ■ |
| Cottons Eco  | ■ | ■ | ■ | ■ | ■ | ■ |
| Wash&Dry 60Min.  | | | | ■ | | |
| Synthetics  | ■ | ■ | ■ | ■ | ■ | ■ |
| Delicates  | ■ | ■ | ■ | ■ | ■ | ■ |

| Programme |  |  |  |  |  |  |
|---|---|---|---|---|---|--|
| Silk  | ■ | ■ | | ■ | | |
| Wool/Handwash   | ■ | ■ | ■ | ■ | | |
| Duvet  | ■ | | | ■ | | |
| Spin/Drain   1) | ■ | ■ | | ■ | | |
| Rinse  | ■ | ■ | ■ | ■ | | ■ |

1) Set the spin speed. Make sure it is suitable for the type of fabric being washed. If you set the No Spin option then only the drain phase is available.

5.2 Automatic drying

| Dryness Level | Type of fabric | Load |
|---|---|------------|
|  Extra Dry For towelling materials | Cottons and Linen (bathrobes, bath towels, etc) | up to 4 kg |
|  Cupboard Dry For items to be stored | Cottons and Linen (bathrobes, bath towels, etc) | up to 4 kg |
| | Synthetics and mixed fabrics (jumpers, blouses, underwear, household and bed linen) | up to 2 kg |
| | Silk items (blouses, shirts, clothing..) | up to 1 kg |
| | Wool items (woollen jumpers) | up to 1 kg |
|  Iron Dry Suitable for ironing | Cottons and Linen (sheets, tablecloths, shirts, etc) | up to 4 kg |

5.3 Timed drying

| Dryness Level | Type of fabric | Load (kg) | Spin speed (rpm) | Suggested duration (mins) |
|---|---|-----------|------------------|---------------------------|
| Extra Dry For towelling materials | Cottons and Linen (bathrobes, bath towels, etc) | 4 | 1400 | 200 - 215 |
| | | 2 | 1400 | 115 - 125 |
| | | 1 | 1400 | 60 - 70 |

| Dryness Level | Type of fabric | Load (kg) | Spin speed (rpm) | Suggested duration (mins) |
|---|---|-----------|------------------|---------------------------|
| Cupboard Dry For items to be stored | Cottons and Linen (bathrobes, bath towels, etc) | 4 | 1400 | 190 - 205 |
| | | 2 | 1400 | 105 - 115 |
| | | 1 | 1400 | 50 - 60 |
| Cupboard Dry For items to be stored | Synthetics and mixed fabrics (jumpers, blouses, underwear, household and bed linen) | 2 | 1200 | 95 - 110 |
| | | 1 | 1200 | 45 - 55 |
| | Wool (woollen jumpers) | 1 | 1200 | 80 - 100 |
| | Silk (blouses, shirts, clothes etc) | 1 | 1000 | 80 |
| Iron Dry Suitable for ironing | Cottons and Linen (sheets, tablecloths, shirts, etc) | 4 | 1400 | 110 - 125 |
| | | 2 | 1400 | 65 - 75 |
| | | 1 | 1400 | 40 - 50 |

5.4 Woolmark Apparel Care - Blue



- The wool wash cycle of this machine has been approved by The Woolmark Company for the washing of wool garments labelled as "hand wash" provided that the products are

washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M1380

- The wool drying cycle of this machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled "hand wash" provided that the garments are washed in a Woolmark endorsed hand washing cycle and dried according to the instructions issued by the manufacturer. M1381

In UK, Eire, Hong Kong and India the Woolmark symbol is a certification trademark.

6. CONSUMPTION VALUES



Stated values are obtained in laboratory conditions with relevant standards. Different causes can change the data: the quantity and type of laundry and ambient temperature. Water pressure, the supply voltage and the temperature of inlet water may also affect the washing programme duration.



Technical specifications may be changed without prior notice to improve the quality of product.



At the start of the programme, the display shows the programme duration for the maximum load capacity. During the washing phase the programme duration is automatically calculated and can be greatly reduced if the laundry load is lower than the maximum load capacity (e.g. Cotton 60°C, maximum load capacity 7 kg, the programme duration exceeds 2 hours; actual load 1 kg, the programme duration will be less than 1 hour). When the appliance is calculating the real programme duration a dot flashes in the display.

| Programmes | Load (kg) | Energy consumption (kWh) | Water consumption (litre) | Approximate programme duration (minutes) |
|--------------------------------|-----------|--------------------------|---------------------------|--|
| Cottons 60°C | 7 | 1.25 | 70 | 146 |
| Cottons Eco 60°C ¹⁾ | 7 | 0.98 | 52 | 238 |
| Cottons 40°C | 7 | 0.78 | 70 | 161 |
| Synthetics 40°C | 3,5 | 0.47 | 50 | 171 |
| Delicates 40°C | 3,5 | 0.53 | 62 | 121 |
| Wool/Handwash 30°C | 1,5 | 0.25 | 45 | 58 |

¹⁾ This programme at 60 °C with a load of 7 kg is the reference programme for energy label data, in compliance with UAE. S 5010 2:2013.

7. OPTIONS

7.1 Temperature

Set this option to change the default temperature.

Indicator — = cold water.

The display shows the set temperature.


7.2 Spin

With this option you can decrease the default spin speed.


The display shows the indicator of the set speed.


Additional spin options:


No Spin

- Set this option to remove all spin phases.
- Set it for very delicate fabrics.
- The rinse phase uses more water for some washing programmes.
- The display shows the indicator .

Rinse Hold


- Set this option to prevent the laundry creases.
- The washing programme stops with the water in the drum. The drum turns regularly to prevent the laundry creases.
- The door stays locked. You must drain the water to unlock the door.
- The display shows the indicator .

 To drain the water refer to 'At the end of the programme'.

7.3 Drying time 

With this option you can set the time for the fabrics you have to dry. The display shows the set value.

Each time you press this touchpad the time value increases by 5 minutes.

 You cannot set all time values for different types of fabrics.

7.4 Delay Start 

With this option you can delay the start of a programme from 30 minutes to 20 hours.

The display shows the related indicator.

The appliance starts working and the lid is locked.

After a few minutes the lid can be opened.

 
7.5 Prewash 

With this option you can add a prewash phase to a washing programme.




Use this option for heavy soil.

When you set this option the programme duration increases.

The related indicator comes on.



7.6 Drying level 

With this option you can set an automatic level of dryness for the laundry. The display shows the symbol of the set level.







 

 


-  **Extra dry** level for cotton items
-  **Cupboard dry** level for cotton, synthetic, silk and wool items
-  **Iron dry** level for cotton items





7.7 Time Manager –  +

When you set a washing programme, the display shows the default duration.

Press  or  to decrease or increase the programme duration.

The Time Manager is available only with the programmes in the table.

| Indicator |  |  |  | Cottons Eco |  |
|--|---|---|---|-------------|--|
|  1) | ■ | ■ | | | |
|  | ■ | ■ | ■ | | |
|  | ■ | ■ | | | |
|  | ■ | ■ | ■ | ■ | ■ 2) |
|  | ■ | ■ | | | |
|  | ■ 3) | ■ 3) | ■ | | |
|  | ■ | ■ | | | |




| Indicator |  |  |  | Cottons Eco |  |
|--|---|---|---|-------------|---|
|  4) | ■ | ■ | ■ 3) | 3) | ■ 5) |

- 1) Shortest: to fresh the laundry.
- 2) Programme duration suitable for laundry refreshing.
- 3) Programme default duration.
- 4) Longest: Increasing the programme duration gradually decreases the energy consumption. The optimized heating phase saves energy and the longer duration maintains the same washing results (specially for normal soil).
- 5) Default programme duration suitable for laundry anticreasing.



8. SETTINGS

8.1 Child Lock

With this option you can prevent that the children play with the control panel.




- To **activate/deactivate** this option, press  and  at the same time until the indicator  **comes on/goes off**.

You can activate this option:

- After you press : the options and the programme knob are locked.
- Before you press : the appliance cannot start.



8.2 Permanent Extra Rinse

With this option you can permanently have an extra rinse when you set a new programme.

- To **activate/deactivate** this option press  and  at the same time until the indicator  **comes on/goes off**.

8.3 Acoustic signals

The acoustic signals operate when:

- The programme is completed.
 - The appliance has a malfunction.
- To **deactivate/activate** the acoustic signals, press  and  at the same time for 6 seconds.



If you deactivate the acoustic signals, they continue operate when the appliance has a malfunction.

9. BEFORE FIRST USE

1. Connect the mains plug to the mains socket.
2. Open the water tap.
3. Put a small quantity of detergent in the compartment for washing phase.

4. Set and start a programme for cotton at the highest temperature without laundry.

This removes all possible dirt from the drum and the tub.

10. DAILY USE - WASHING ONLY




WARNING!
Refer to Safety chapters.

10.1 Loading the laundry

1. Open the appliance door
2. Shake the items before you put them in the appliance.
3. Put the laundry in the drum, one item at a time.

Make sure not to put too much laundry in the drum.

4. Close the door firmly.

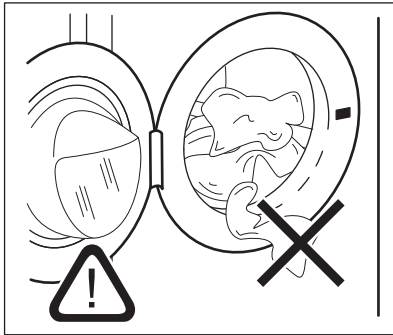

CAUTION!
Make sure that no laundry stays between the seal and the door. There is a risk of water leakage or damage to the laundry.

10.3 Detergent compartments



CAUTION!
Use only specified detergents for washing machine.




Always obey the instructions that you find on the packaging of the detergent products.






Washing heavily oiled, greasy stains could cause damage rubber parts of the washing machine.

10.2 Using detergent and additives

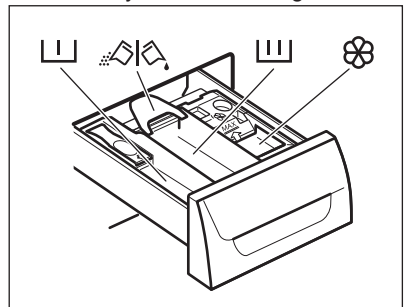
1. Measure out the detergent and the fabric conditioner.
2. Put the detergent and the fabric conditioner into the compartments.
3. Carefully close the detergent drawer



Detergent compartment for prewash phase.

| | |
|---|--|
|  | Detergent compartment for washing phase. |
|  | Compartment for liquid additives (fabric conditioner, starch). |
|  | Flap for powder or liquid detergent. |

10.4 Liquid or powder detergent

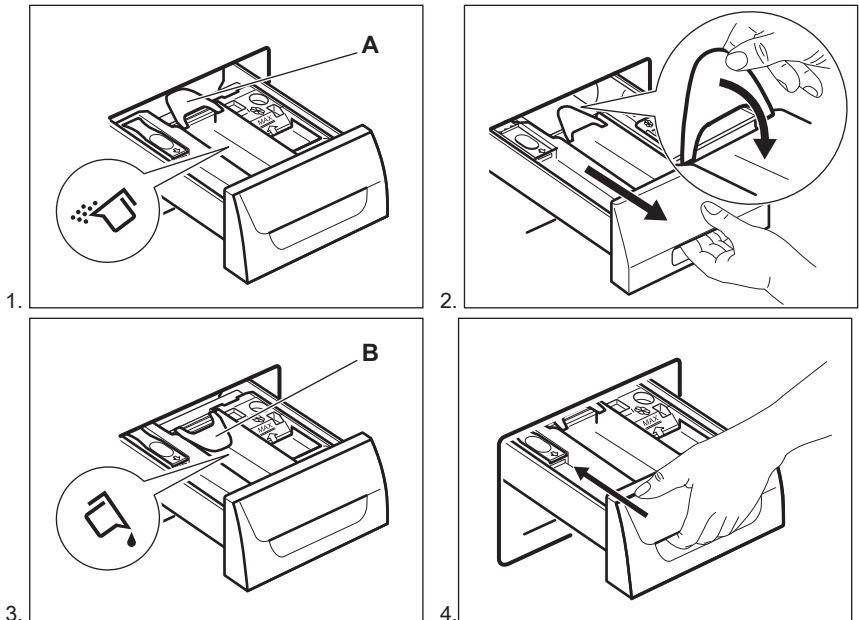


- Position **A** for powder detergent (factory setting).
- Position **B** for liquid detergent.




When you use the liquid detergent:

- Do not use gelatinous or thick liquid detergents.
- Do not put more liquid than the maximum level.
- Do not set the prewash phase.
- Do not set the delay start.

 
10.5 Activating the appliance

Press the  button to activate or deactivate the appliance. A tune sounds when the appliance is activated.

10.6 Setting a programme




1. Turn the programme knob and set the programme:
 - The related programme indicator comes on.
 - The indicator of the  flashes.

- The display shows the level of the Time Manager, the programme duration and the indicators of the programme phases.
2. If necessary, change the temperature, the spin speed, the cycle duration or add available options. When you activate an option, the indicator of the set option comes on.

i If you set something incorrect, the display shows the message .

10.7 Starting a programme without the delay start


Press .

- The indicator of  stops to flash and stays on.
- The indicator  starts to flash on the display.
- The programme starts, the door locks, the display shows the indicator .
- The drain pump can operate for a short time when the appliance fills water.

i After approximately 15 minutes from the start of the programme:


- The appliance adjusts automatically the programme duration agree with the laundry load.
- The display shows the new value.


10.8 Starting a programme with the delay start




 
1. Press  again and again until the display shows the delay you want to set.

The related indicator comes on the display.

2. Press :
 - The appliance starts the countdown.



- The door locks, the display shows the indicator .
- When the countdown is completed, the programme starts automatically.

i You can cancel or change the set of the delay start before you press . To cancel the delay start:


- Press  to set the appliance to pause.
- Press  until the display shows .
- Press  again to start the programme immediately.

10.9 Interrupting a programme and changing the options

You can change only some options before they operate.

1. Press . The indicator flashes.
2. Change the options.
3. Press  again. The programme continues.

10.10 Cancelling a running programme

1. Press the button  for some seconds to cancel the programme and to deactivate the appliance.
2. Press the same button again to activate the appliance. Now, you can set a new washing programme.

i Before starting the new programme the appliance could drain the water. In this case, make sure that the detergent is still in the detergent compartment, if not fill the detergent again.

10.11 Opening the door



CAUTION!

If the temperature and level of the water in the drum are too high and the drum still rotates, you cannot open the door.

While a programme or the delay start operates, the appliance door is locked and the display shows the indicator

Open the appliance door when the programme or the delay start operates:

1. Press to pause the appliance.
2. Wait until the door lock indicator goes off.
3. Open the door.
4. Close the door and press again . The programme or delay start continues to operate.

10.12 At the end of the programme

- The appliance stops automatically.
- The acoustic signal operates (if it is activated).
- In the display comes on.
- The indicator of the goes off.
- The door lock indicator goes off.
- You can open the door.
- Remove the laundry from the appliance. Make sure that the drum is empty.
- Close the water tap.
- Press the button for some seconds to deactivate the appliance.
- Keep the door ajar, to prevent the mildew and odours.

The washing programme is completed, but there is water in the drum:

- The drum turns regularly to prevent the creases in the laundry.
- The door lock indicator is on. The door stays locked.

- You must drain the water to open the door.

To drain the water:

1. Press . The appliance drains the water and spins.
2. To make the appliance drain only, set . If necessary, decrease the spin speed.
3. When the programme is completed, and the door lock indicator goes off, you can open the door.
4. Press the button for some seconds to deactivate the appliance.



The appliance drains and spins automatically after approximately 18 hours (except for Wool programme).

10.13 AUTO Stand-by option

The AUTO Stand-by function automatically deactivates the appliance to decrease the energy consumption when:

- You do not use the appliance for 5 minutes before you press . Press the button to activate the appliance again.
- After 5 minutes from the end of the washing programme Press the button to activate the appliance again. The display shows the end of the last set programme. Turn the programme knob to set a new cycle.



If you set a programme or an option that ends with water in the drum, the AUTO Stand-by function **doesn't deactivate** the appliance to remind you to drain the water.

11. DAILY USE - DRYING ONLY



WARNING!
Refer to Safety chapters.




This appliance is an automatic washer dryer.

11.1 Drying setting



WARNING!
Make sure that the water tap is open.

 



1. Press On/Off for some seconds to activate the appliance.
2. Load the laundry one item at a time.
3. Turn the programme dial to the programme applicable for the items to dry. The display shows the drying indicator .




 
 
To have a good drying performance **do not** exceed the maximum drying loads recommended in the user manual. **Do not** set a spin speed lower than the automatic speed of the set programme.

11.2 Drying at automatic levels

The laundry can be dried at pre-defined levels of dryness:

1. Press  again and again until the display shows one of the dryness level indicator:
 - : IRON DRY level indicator for cotton items
 - : CUPBOARD DRY level indicator for cotton, synthetic, silk and wool items
 - : EXTRA DRY level indicator for cotton items

The display shows a time value, calculated on the default load size. If the amount of your laundry is more or less than the default size, the appliance adjusts automatically the time value during the cycle.





2. Press  to start the programme. The display shows the door locked indicator . The drying indicator  starts to flash.



You cannot set all dryness levels for any type of laundry.

11.3 Timed drying

The laundry can also be dried with a manual timed drying:

1. Press  again and again to set the time value (see the «Programmes for timed drying» table).
 - The display shows 10 minutes. Each time you press this touchpad the time value increases by 5 minutes.
 - The display shows the set time value: for example **40**.
 - After some seconds the display shows a new time value: **43**. The appliance calculates also the duration of the anti-crease and the cooling phases.
2. Press  to start the programme.
 - The display shows regularly a new time value.
 - The drying indicator  starts to flash.
 - The display shows the door locked indicator .






If you set only 10 minutes of drying, the appliance performs only a cooling phase. If the laundry is not sufficient dry, set again a short drying time.

11.4 End of the drying programme

The appliance stops automatically.

- The acoustic signals operate (if they are active).

- In the display  comes on.
- The indicator  goes off.
- The last minutes of the drying cycle the appliance performs a cooling and anti-crease phase. The door is still locked.

When the door locked  goes off in the display, you can open the door.

1. Press the button  for some seconds to deactivate the appliance.

12. DAILY USE - WASHING & DRYING



WARNING!
Refer to Safety chapters.



This appliance is an automatic washer dryer.

12.1 Non-Stop programme

1. Press On/Off for some seconds to activate the appliance.
2. Load the laundry one item at a time.





To have a good drying performance **do not** exceed the maximum drying loads recommended in the user manual. **Do not** set a spin speed lower than the automatic speed of the set programme.

3. Put the detergent and the additives in the appropriate compartment.
4. Turn the programme dial to the washing programme.

The display shows the indicators of the different washing phases.

5. Set the available options.

12.2 Washing & Automatic drying



1. Press  again and again until the display shows one of the dryness level indicator:
 - : IRON DRY level indicator for cotton items


After some minutes from the end of the programme, the energy saving function automatically deactivates the appliance.

2. Remove the laundry from the appliance.

Make sure that the drum is empty.


3. Keep the door ajar, to prevent mildew and odours.
4. Close the water tap.


- : CUPBOARD DRY level indicator for cotton, synthetic, wool and silk items
- : EXTRA DRY level indicator for cotton items

The display shows the indicator . The time value on the display is the duration of the washing + drying cycles, calculated on a default load size.



To have a good drying the appliance does not let you set a too low spin speed for the items to be washed and dried.

2. Press  to start the programme. In the display the indicator of the set dryness level stays on.


The door locked indicator  goes on. The display shows regularly a new time value.





The last minutes of the drying cycle the appliance performs the anti-crease and the cooling phases.


12.3 Washing & Timed Drying

To have a good drying the appliance does not let you set a too low spin speed for the items to be washed and dried.

 
1. Press  to set the drying time value. The display shows 10 minutes.

The indicator  comes on in the display. The display shows the set drying value time: for example . After some

seconds the display shows the final time value **2:03**, that is the total duration of the washing and drying cycles (washing + drying + anti-crease + cooling phases).

-  If you set only 10 minutes of drying after washing, the appliance calculates also the duration of the anti-crease and the cooling phases.

2. Press  to start the programme.

In the display the indicator  comes on. The door is locked. The display shows regularly a new time value.

12.4 End of the programme

The appliance stops automatically. The acoustic signals operate (if they are active).

For more information see "At the end of the drying programme " of the previous chapter.

1. Remove the laundry from the appliance.

Make sure that the drum is empty.

2. Keep the door ajar to prevent mildew and odours.
3. Close the water tap.

12.5 Fluff in the fabrics

During the washing and/or drying phase, some types of fabric, (sponge, wool, sweatshirt) could release fluff.




The released fluff could stick to the fabrics during the next cycle.

To prevent the fluff in your laundry, we recommend that you:

- Do not wash dark fabrics after you have washed and dried light coloured fabrics (new sponge, wool, sweatshirt) and the contrary.
- Line dry this type of fabrics at open air when they are washed the first time.
- Clean the drain filter.
- After the drying phase, clean the empty drum, the gasket and the door with a wet cloth.

12.6 How to remove the fluff in the garments

To remove the fluff inside the drum, set a special programme:

1. Empty the drum.
2. Clean the drum, the gasket and the door with a wet cloth.
3. Set the rinse programme.
4. Press at the same time  and  to activate the cleaning function until the display shows **CLE**.
5. Press  to start the programme.

13. HINTS AND TIPS



WARNING!
Refer to Safety chapters.

13.1 The laundry load

- Divide the laundry in: white, coloured, synthetics, delicates and wool.
- Obey the washing instructions that are on the laundry care labels.
- Do not wash white and coloured items together.
- Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times.
- Button up pillowcases, close zippers, hooks and poppers. Tie up belts.
- Empty the pockets and unfold the items.
- Turn multilayered fabrics, wool and items with painted illustrations inside out.
- Remove hard stains with a special detergent.
- Wash and pre-treat heavy soil stains before putting items in drum
- Be careful with the curtains. Remove the hooks and put the curtains in a washing bag or pillowcase.
- Do not wash laundry without hems or with cuts. Use a washing bag to wash

- small and/or delicate items (e.g. underwired bras, belts, tights, etc.).
- A very small load can cause balance problems with the spin phase. If this occurs, adjust manually the items in the tub and start the spin phase again.

13.2 Stubborn stains

For some stains, water and detergent is not sufficient.

We recommend that you pre-treat these stains before you put the items in the appliance.

Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric.

13.3 Detergents and additives

- Only use detergents and additives specially made for washing machines:
 - powder detergents for all types of fabric,
 - powder detergents for delicate fabrics (40 °C max) and woollens,
 - liquid detergents, preferably for low temperature wash programmes (60 °C max) for all types of fabric, or special for woollens only.
- Do not mix different types of detergents.
- To help the environment, do not use more than the correct quantity of detergent.
- Obey the instructions that you find on the on packaging of these products.
- Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil.
- If your appliance does not have the detergent dispenser with the flap device, add the liquid detergents with a dosing ball (supplied by the detergent's manufacturer).

13.4 Ecological hints

- Set a programme without the prewash phase to wash laundry with normal soil.

- Always start a washing programme with the maximum load of laundry allowed.
- If necessary, use a stain remover when you set a programme with a low temperature.
- To use the correct quantity of detergent, check the water hardness of your domestic system. Refer to "Water hardness".

13.5 Water hardness

If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water hardness is soft it is not necessary to use a water softener.

To know the water hardness in your area, contact your local water authority.

Use the correct quantity of the water softener. Obey the instructions that you find on the packaging of the product.

13.6 Drying hints

Prepare the drying cycle

- Open the water tap.
- Check if the drain hose is connected properly. Refer to installation chapter for more information.
- For the maximum laundry load of the drying programmes, refer to the drying programmes table.





13.7 Items not suitable for drying

Do not set a drying programme for this laundry:

- Very delicate items.
- Synthetic curtains.
- Pieces of clothing with metal inserts.
- Nylon stockings.
- Quilts.
- Bed covers.
- Duvets.
- Anoraks.
- Sleeping bags.
- Fabrics with residue of hair sprays, nail solvents or similar.
- Garments with foam-rubber or materials similar to foam-rubber.

13.8 Garment labels

When you dry the laundry, obey the indications on the labels of the manufacturers:

-  = The item can be tumble dried
-  = The drying cycle is at high temperature
-  = The drying cycle is at reduced temperature
-  = The item can not be tumble dried.

13.9 Drying cycle duration

The drying time can change depending on:

- speed of the last spin
- dryness level
- type of laundry
- weight of the load

13.10 Additional drying

If, at the end of the drying programme, the laundry is still damp, set a short drying cycle again.



WARNING!
To avoid creasing and shrinkage do not overdry the laundry.

13.11 General Tips

Refer to the «Drying programmes» table to find the **average** drying times. Experience will help you to dry the laundry better. Take note of the duration of the cycles done before.

To avoid the static charge at the end of the drying cycle:

1. Use fabric conditioner in the washing cycle.
2. Use special fabric conditioner for tumble dryers.

When the drying programme is completed remove the laundry promptly.

14. CARE AND CLEANING



WARNING!
Refer to Safety chapters.

14.1 External cleaning

Clean the appliance with soap and warm water only. Fully dry all the surfaces.



CAUTION!
Do not use alcohol, solvents or chemical products.

14.2 Descaling

If the water hardness in your area is high or moderate, we recommend that you use a water descaling product for washing machines.

Regularly examine the drum to prevent limescale and rust particles.

To remove rust particles use only special products for washing machines. Do this separately from the laundry wash.




Always obey the instructions that you find on the packaging of the product.

14.3 Maintenance wash

With the low temperature programmes it is possible that some detergent stays in the drum. Perform a maintenance wash regularly. To do this:

- Remove all laundry from the drum.
- Select the cotton programme with the highest temperature with a small quantity of detergent.


14.4 Door seal

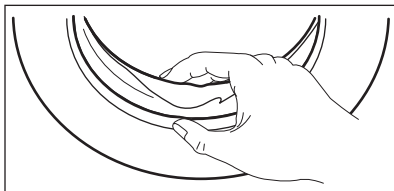


Regularly examine the seal and remove all objects from the inner part.

14.5 Cleaning the detergent dispenser


1.

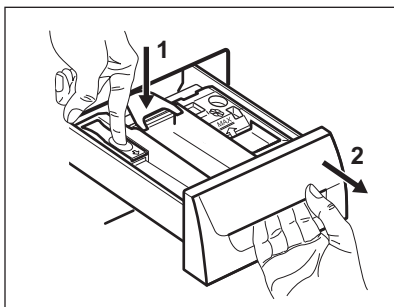


2.

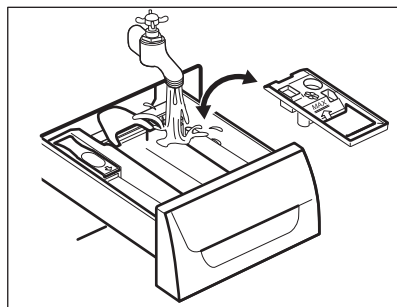

3.

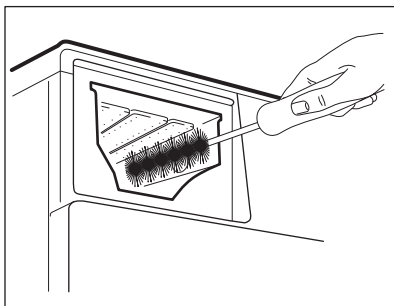









4.

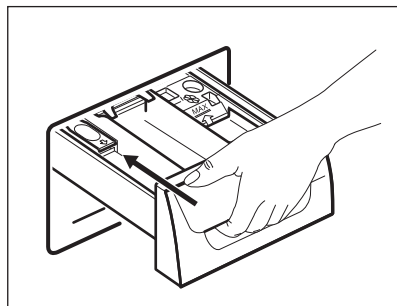


14.6 Cleaning the drain filter



Do not clean the drain filter if the water in the appliance is hot.

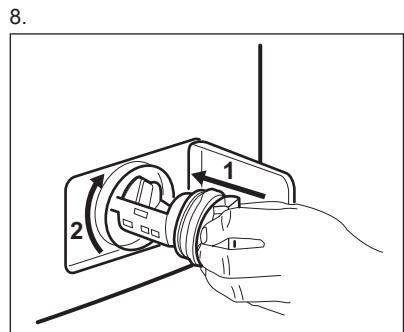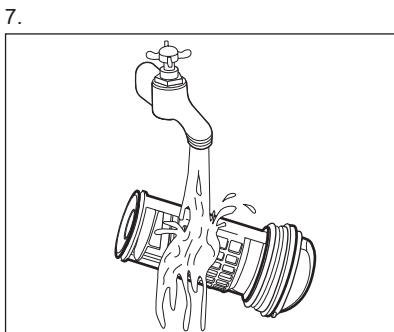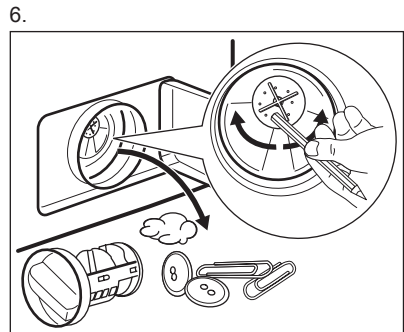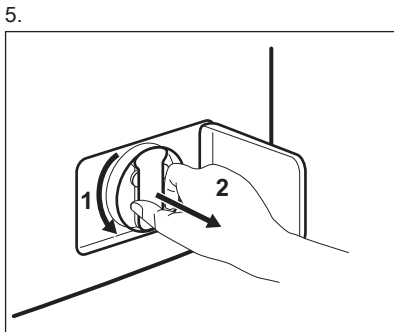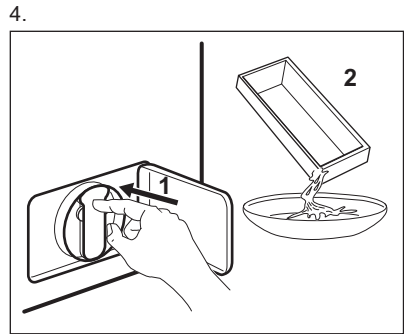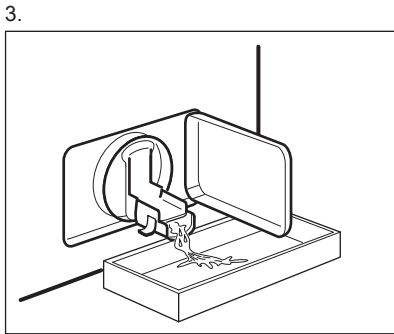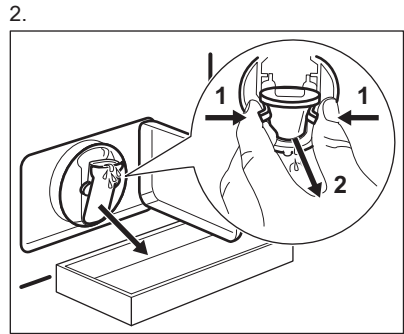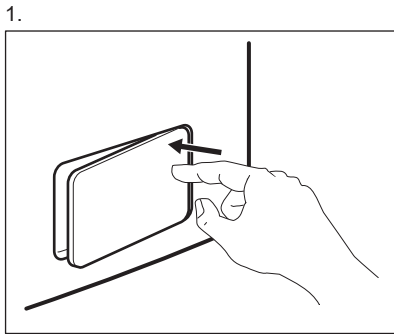


9.

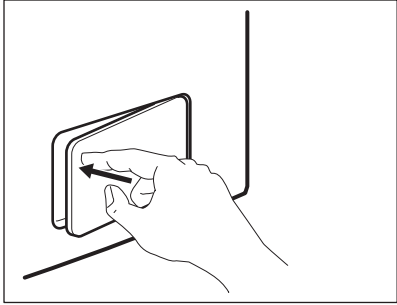


14.7 Cleaning the inlet hose and the valve filter


1.

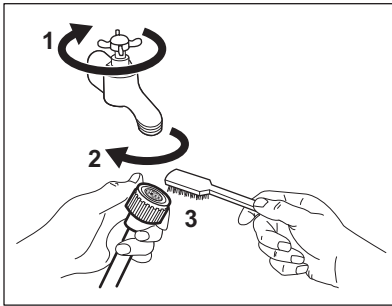


2.

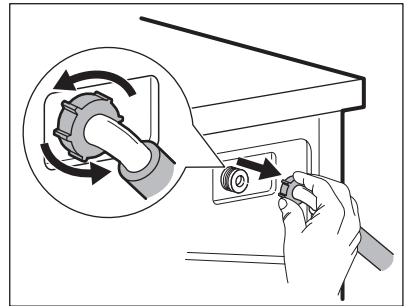

3.

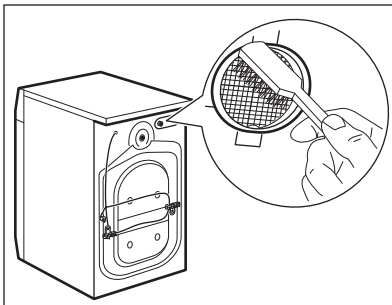

4.

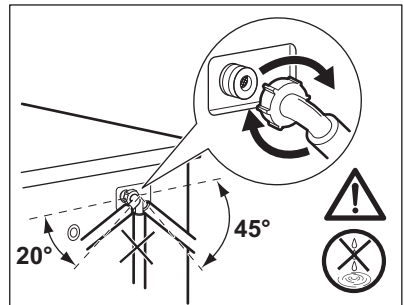

14.8 Emergency drain

Because of a malfunction, the appliance cannot drain the water.

If this occurs, do steps (1) through (9) of 'Cleaning the drain filter'. If necessary, clean the pump.

When you drain the water with the emergency drain procedure, you must activate the drain system again:

1. Put 2 litres of water in the main wash compartment of the detergent dispenser.
2. Start the programme to drain the water.

14.9 Frost precautions

If the appliance is installed in an area where the temperature can be less than 0° C, remove the remaining water from the inlet hose and the drain pump.

1. Disconnect the mains plug from the mains socket.
2. Close the water tap.
3. Put the two ends of the inlet hose in a container and let the water flow out of the hose.
4. Empty the drain pump. Refer to the emergency drain procedure.

5. When the drain pump is empty, install the inlet hose again.



WARNING!

Make sure that the temperature is higher than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures.

15. TROUBLESHOOTING



WARNING!

Refer to Safety chapters.

15.1 Introduction

The appliance does not start or it stops during operation.

First try to find a solution to the problem (refer to the table). If the problem persists, contact the Authorised Service Centre.

With some problems, the acoustic signals operate and the display shows an alarm code:

- *E10* - The appliance does not fill with water properly.

- *E20* - The appliance does not drain the water.
- *E40* - The appliance door is open or not closed correctly. Please check the door!
- *E40* - The mains supply is unstable. Wait until the mains supply is stable.
- *E91* - No communication between electronic elements of the appliance. Switch off and switch on again.



WARNING!

Deactivate the appliance before you do the checks.

15.2 Possible failures

| Problem | Possible solution |
|-------------------------------|--|
| The programme does not start. | <ul style="list-style-type: none"> • Make sure that the mains plug is connected to the mains socket. • Make sure that the appliance door is closed. • Make sure that there is not a damaged fuse in the fuse box. • Make sure that the Start/Pause has been pressed. • If the delay start is set, cancel the setting or wait for the end of countdown. • Deactivate the Child Lock function if it is on. |

| Problem | Possible solution |
|---|---|
| The appliance does not fill with water properly. | <ul style="list-style-type: none"> • Make sure that the water tap is open. • Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority. • Make sure that the water tap is not clogged. • Make sure that the filter of the inlet hose and the filter of the valve are not clogged. Refer to "Care and cleaning". • Make sure that the inlet hose has no kinks or bends. • Make sure that the connection of the water inlet hose is correct. • Make sure that the connections of the water inlet hoses are correct. |
| The appliance does not fill with water and drain immediately. | <ul style="list-style-type: none"> • Make sure that the drain hose is in the correct position. The hose may be too low. Refer to 'Installation instruction'. |
| The appliance does not drain the water. | <ul style="list-style-type: none"> • Make sure that the sink spigot is not clogged. • Make sure that the drain hose has no kinks or bends. • Make sure that the connection of the drain hose is correct. • Set the drain option if you set a programme without drain phase. • Set the drain option if you set an option which ends with water in the drum. • Make sure that the drain filter is not clogged. Clean the filter, if necessary. Refer to 'Care and cleaning'. • If problem remains please contact the Authorised Service Centre. |
| The spin phase does not operate or the washing cycle lasts longer than usually. | <ul style="list-style-type: none"> • Set the spin option. • Set the drain option if you set an option which ends with water in the drum. • Make sure that the drain filter is not clogged. Clean the filter, if necessary. Refer to 'Care and cleaning'. • Adjust manually the items in the tub and start the spin phase again. This problem may be caused by balance problems. |
| There is water on the floor. | <ul style="list-style-type: none"> • Make sure that the couplings of the water hoses are tight and there is not water leakages. • Make sure that the water inlet hose and the drain hose have no damages. • Make sure you use the correct detergent and the correct quantity of it. |

| Problem | Possible solution |
|---|---|
| You cannot open the appliance door. | <ul style="list-style-type: none"> • Make sure that the washing programme is finished. • Set the drain or the spin option if there is water in the drum. • Do the emergency drain procedure. See "Frost precautions" (in "Care and Cleaning" chapter). • Make sure that the appliance receives electrical power. • This problem may be caused by a failure of the appliance. Contact the Authorised Service Centre. If you need to open the lid, please read carefully "Emergency door opening". |
| The appliance makes an unusual noise. | <ul style="list-style-type: none"> • Make sure the levelling of the appliance is correct. Refer to 'Installation instruction'. • Make sure the packaging and/or the transit bolts are removed. Refer to 'Installation instruction'. • Add more laundry in the drum. The load may be too small. |
| The cycle is shorter than the time displayed. | <ul style="list-style-type: none"> • The appliance calculates a new time according to the laundry load. See the 'Consumption Values' chapter. |
| The cycle is longer than the time displayed. | <ul style="list-style-type: none"> • An unbalanced laundry load increases the duration time. This is a normal behaviour of the appliance. |
| The washing results are not satisfactory. | <ul style="list-style-type: none"> • Increase the detergent quantity or use a different detergent. • Use special products to remove the stubborn stains before you wash the laundry. • Make sure that you set the correct temperature. • Decrease the laundry load. |
| You cannot set an option. | <ul style="list-style-type: none"> • Make sure that you press only the wanted touch button(s). |
| The appliance does not dry or does not dry correctly. | <ul style="list-style-type: none"> • Turn the water tap on. • Make sure the drain filter is not clogged. • Reduce the laundry load. • Make sure you have set the correct cycle. If necessary, set again a short drying time. |
| The laundry is full of different colours fluff. | <p>The fabrics washed in the previous cycle released fluff of a different colour:</p> <ul style="list-style-type: none"> • The drying phase helps to eliminate some fluff. • Clean the clothes with a fluff remover. <p>In case of an excessive amount of fluff in the drum run the special programme to clean it (refer to "Fluff in the fabrics" for more details).</p> |

After the check, activate the appliance. The programme continues from the point of interruption.

If the problem occurs again, contact the Authorised Service Centre.

If the display shows other alarm codes. Deactivate and activate the appliance. If the problem continues, contact the Authorised Service Centre.

16. EMERGENCY DOOR OPENING

In case of power failure or functioning failure the appliance door remains locked. The washing programme continues when the power is restored. If the door remains locked in case of failure, it is possible to open it using the emergency unlock function.

Before opening the door:



CAUTION!

Make sure that the water temperature is not too high and the laundry is not hot. If necessary, wait until they cool down.



CAUTION!


Make sure that the drum is not rotating. If necessary, wait until the drum stops rotating.



Make sure that the water level inside the drum is not too high. If necessary, proceed with an emergency drain (refer to «Emergency drain» in «Care and cleaning» chapter).

To open the door, proceed as follows:

1. Press the On/Off button to switch the appliance off.
2. Disconnect the mains plug from the mains socket.
3. Open the filter flap.
4. Keep the emergency unlock trigger pulled downward and, at the same time, open the appliance door.

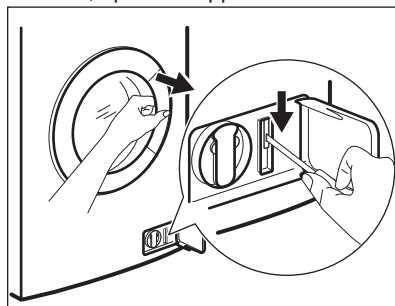


5. Take out the laundry and then close the appliance door.
6. Close the filter flap.

17. TECHNICAL DATA

| | | |
|--|---|---------------------------------------|
| Dimension | Width/ Height/ Depth/ Total depth | 600 mm/ 850 mm/ 522 mm/ 555 mm |
| Electrical connection | Voltage Overall power Fuse Frequency | 220-240 V 2200 W 13 A 50 Hz |
| Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture | | IPX4 |
| Water supply pressure | Minimum Maximum | 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) |
| Maximum wash load | Cotton | 7 kg |
| Maximum dry load | Cotton Synthetics | 4 kg 2 kg |

| | | |
|------------|---------|----------|
| Spin Speed | Maximum | 1400 rpm |
|------------|---------|----------|

18. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.electrolux.com/shop



157004501-A-462017

